

XO-1

OWNER'S MANUAL

READ THIS MANUAL CAREFULLY

It contains important safety information.

Make sure operator holds a valid driver license.

TABLE OF CONTENTS

Foreword	6
Welcome	6
EVAP System (Evaporative Emission Control System)	7
Catalytic Converter	8
Introduction	11
VIN and Engine Serial Number	12
Specifications	13
Operator Safety	16
General Safety Precautions	16
Owner Responsibilities.....	20
Safe Riding Gear.....	21
Potential Hazard Warnings.....	24
Vehicle View	29
Rear Left View.....	29
Front Right View.....	30
Controls and Features	31
Clutch Lever	31
Front Hand Brake Lever	31

Handlebar Switch, LH	32
Handlebar Switch, RH.....	33
Throttle Grip	34
Locks	34
Gear Shift Lever	36
Rear Brake Lever	37
Side Stand.....	37
Passenger Handhold and Footrest	38
Instrument.....	39
Instrument Indicators.....	39
Instrument Display	42
Instrument Adjustments.....	44
Operating Your Vehicle	47
Break-In Period	47
Daily Safety Inspection.....	48
Starting.....	50
Starting Off	51
Shifting, Riding	51
Brake.....	53
Parking	54

Safety Operation	55
Safe Riding Technique	55
Additional Cautions for High Speed Operation	57
Maintenance	58
Severe Use Definition	58
Key Points of Lubrication Schedule	59
Break-In Maintenance Schedule	60
Periodic Maintenance Schedule.....	62
Clutch Lever Free Play.....	67
Tool Kit	68
Fuel System	69
Fuel Tank.....	69
Fuel Requirement.....	70
Engine	71
Engine Oil Level Inspection.....	71
Change Engine Oil and Oil Filter.....	72
Engine Oil Capacity	74
Spark Plug.....	75
Air Intake and Exhaust System	76
Fuel & Exhaust Detecting System.....	76

Air Intake Valve	76
Valve Clearance	77
Air Filter	78
Tires and Chain.....	79
Tire Specification	79
Tire Payload	80
Tire Friction	81
Drive Chain Inspection	82
Chain Tension Adjustment.....	83
Brake System.....	85
Front Brake Lever Inspection	85
Rear Brake Pedal Inspection	85
Brake Fluid Level Inspection	86
Adding Brake Fluid	87
Brake Disc Inspection	89
Brake Caliper Inspection	89
Anti-Lock Braking System (ABS)	90
Shock Absorbers	91
Shock Absorber Inspection	91
Rear Shock Absorber Adjustment	91

Electrical System and Lights	92
Battery	92
Light	97
Fuse	98
Catalytic Converter	99
Fuel Evaporation System	100
Cleaning and Storage	101
General Precautions	101
Washing the Vehicle.....	102
Protecting the Surface.....	103
Windshield and Other Plastic.....	103
Chrome and Aluminum.....	104
Preparation for Storage.....	105
Preparation After Storage.....	106
Transporting Your Vehicle	106
General Troubles and Causes	107
Telematics Box (T-BOX) and CFMOTO Ride App	110

FOREWORD

Welcome

Thank you for purchasing a CFMOTO vehicle, and welcome to our world-wide family of CFMOTO enthusiasts. Be sure to visit us online at www.cfmoto.com for the latest news, new product introductions, upcoming events, and more.

CFMOTO is an international company that specializes in the development, manufacture, and marketing of all-terrain vehicles, utility vehicles, large displacement motorcycles, and their core components. Founded in 1989, CFMOTO is devoted to the development of independent brand cultivation and R&D innovation. CFMOTO products are currently distributed through more than 2000 companions worldwide in more than 100 countries and regions. CFMOTO is edging into the advanced ranks in the world of powersports, and aims to supply superior products to dealers and fans globally.

For safe and enjoyable operation of your vehicle, be sure to follow the instructions and recommendations in this owner's manual. Your manual contains instructions for minor maintenance. Information about major repairs is outlined in the CFMOTO Service Manual.

Your CFMOTO dealer knows your vehicle best and is interested in your total satisfaction. Be sure to return to your dealership for all of your service needs during, and after, the warranty period.

Due to constant improvements in the design, quality, or configuration of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. CFMOTO reserves the right to change product features, specifications and components without notice or incurring obligation to the purchaser. Depictions and/or procedures within are intended for reference use only. The most current version of this manual may be available on the CFMOTO consumer website of the market you reside in.

FOREWORD

Before every ride, please inspect your vehicle and follow the basic maintenance procedures before riding. Please keep this manual together with your vehicle, even when transferring the vehicle to others.

Zhejiang CFMOTO power Co., Ltd reserves the final explanation rights of the owner's manual.

DANGER

Operating, servicing and maintaining on-road or off-road vehicles can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.

EVAP System (Evaporative Emission Control System)

(If equipped)

When required by environmental emissions regulations, this vehicle is manufactured with a fuel evaporation system (EVAP) to prevent fuel vapors entering the atmosphere from the fuel tank and fuel system.

During routine maintenance, visually inspect all hose connections for leaks or blockage. Ensure the hoses are not clogged or kinked, which could damage the fuel pump or distort the fuel tank. No other maintenance is necessary.

Contact your dealer if repair is required. Do not modify the EVAP system. Modifying any part of this system will violate environmental emissions regulations.

FOREWORD

Catalytic Converter

CAUTION: Please pay attention to the following to protect your catalytic converter:

- Use only unleaded gasoline. Even gasoline that contains a little lead could damage the reactive metals contained in the catalytic converter and disable it.
- Never add rust preventive oil or engine oil into the muffler. Doing so could damage the catalytic converter.

NOTE

Some features described within this manual may not apply to models in your market.

All descriptions and directions given are from the operator's perspective when properly seated.

Information in this publication is based on the latest production available at the time of approval for printing.

CFMOTO reserves the right to make changes at any time without notice and without incurring any obligation.

FOREWORD

Signal Words

A signal word calls attention to a safety message or messages, a property damage message or messages, and designates a degree or level of hazard seriousness. The standard signal words in this manual are **DANGER**, **WARNING**, **CAUTION** and **NOTE**.

The following signal words and symbols appear throughout this manual and on your vehicle. Your safety is involved when these words and symbols are used. Become familiar with their meanings before reading the manual:

DANGER

This safety alert and icon indicates a potential hazard that may result in serious injury or death.

WARNING

This safety alert and icon indicates a potential hazard that may result in minor or moderate personal injury and/or damage to the vehicle.

CAUTION

This safety alert and icon indicates a potential hazard that may result in damage to the vehicle.

NOTE

A note or notice will alert you to important information or instructions.

FOREWORD
READ THE OWNER'S MANUAL
FOLLOW ALL INSTRUCTIONS AND WARNINGS

 WARNING

Read, understand, and follow all of the instructions and safety precautions in this manual and on all product labels. Failure to follow the safety precautions could result in serious injury or death.

 WARNING

The engine exhaust gas from this product contains CO, which is deadly gas and could cause headaches, giddiness, loss of consciousness, or even death.

INTRODUCTION

Thank you for purchasing a CFMOTO vehicle, and welcome to our world-wide family of CFMOTO enthusiasts. For safe and enjoyable operation of your vehicle, be sure to follow the instructions and recommendations in this owner's manual. Information about major repairs are outlined in the CFMOTO Service Manual, and should only be performed by a CFMOTO service dealer and technician. Be sure to return to your dealership for all of your service needs during, and after, the warranty period.

If you have questions or concerns about your vehicle

All questions or concerns related to your vehicle should be directed to your local CFMOTO dealer first. Your dealer knows your vehicle best and is interested in your total satisfaction. In the event your local dealer is unable to resolve a product issue or concern, you can reach a CFMOTO customer service representative depending on the market you reside in.

Due to constant improvements in design, quality, or configuration of production components, some minor discrepancies may result between the actual vehicle and the information presented in this publication. CFMOTO reserves the right to change product features, specifications, or components without notice or incurring obligation to the purchaser. Depictions, descriptions, and/or procedures in this publication are intended for reference use only. The most current version of this manual is available on the CFMOTO consumer website of the market you reside in.



INTRODUCTION

VIN and Engine Serial Number

Be sure to record the VIN number, engine serial number and name plate information in the spaces below:

Vehicle Identification Number:

Engine Serial Number:

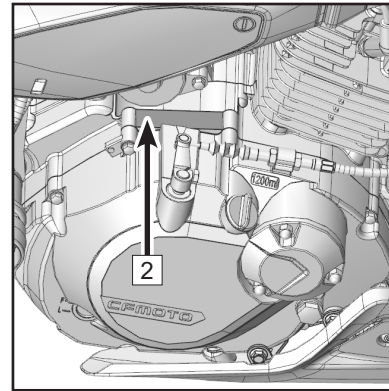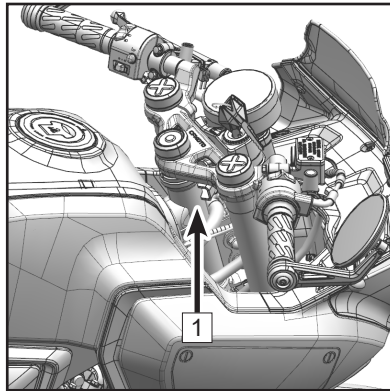

1	VIN No.	2	Engine Serial No.
---	---------	---	-------------------

SPECIFICATIONS

	CF125-8	CF125-8F
Performance		
Max. Power	9.4 Hp (7 kw) / 8250 RPM	
Max. Torque	6.78 ft-lb (9.2 N•m) / 6500 RPM	
Top Designed Speed	56 mph (90 km/h)	
Size		
Length	68.9 in. (1750 mm)	
Width	33.3 in. (847 mm)	
Height	38.4 in. (975 mm)	
Wheelbase	47.8 in. (1214 mm)	
Ground Clearance	6.1 in. (155 mm)	
Curb Weight	251.3 lb. (114 kg)	
Engine		
Type	Vertical, Single, 4 Stroke, Air Coolant	
Displacement	126 mL	124.5 mL
Bore×Stroke	2.24 in. × 1.94 in. (57 mm × 49.4 mm)	2.24 in. × 1.92 in. (57 mm × 48.8 mm)
Compression Ratio	9.0 : 1	
Starting System	Electric Starter	
Fuel Supplying System	Ignition Fuel Injection	
Ignition Control System	ECU Ignition	
Lubricating System	Pressure / Splash Lubrication	

SPECIFICATIONS

Engine Oil Type	First Choice: SAE 10W-40 JASO-MA2	
	Second Choice: SAE 5W-40 / SAE 15W-40 JASO-MA2	
Idle Speed	1600 RPM \pm 150 RPM	1750 RPM \pm 175 RPM
Transmission		
Transmission Type	6-Speed, Manual Gear Shift	
Clutch Type	Wet, Multi-Disc, Manual	
Driving System	Chain Drive	
Primary Reduction Ratio	3.5	
Final Reduction Ratio	2.6	
Gear Ratio	1 st	3.0
	2 nd	1.857
	3 rd	1.368
	4 th	1.143
	5 th	0.957
	6 th	0.875
Chassis		
Tire Size	Front	120/70-12
	Rear	130/70-12
Rim Size	Front	12×MT2.75
	Rear	12×MT3.5
Capacity of Fuel Tank	1.85 Gal (7 L)	

SPECIFICATIONS

Electric Components	
Battery	12V/7 Ah
Headlight	LED
Tail / Brake Light	LED
Turn Signals	LED

OPERATOR SAFETY

General Safety Precautions

WARNING

Failure to heed the warnings contained in this manual can result in serious injury or death. This vehicle is not a toy and can be hazardous to operate.

Read this owner's manual. Understand all safety warnings, precautions and operating procedures before operating this vehicle.

Riding Restrictions

This vehicle is an ADULT VEHICLE ONLY. The operator must acquire a driving license as required by local laws and regulations.

Know Your Vehicle

As the operator of the vehicle, you are responsible for your personal safety, the safety of others, and the protection of the environment. Read and understand your owner's manual, which includes valuable information about all aspects of your vehicle, including safe operating procedures.

OPERATOR SAFETY

Equipment Modifications

CFMOTO is concerned with the safety of our customers and for the general public. Therefore, we strongly recommend that consumers do not install on a vehicle, any equipment that may increase the speed or power of the vehicle, or make any other modifications to the vehicle for these purposes. Any modifications to the original equipment of the vehicle create a substantial safety hazard and increase the risk of body injury. The warranty on your vehicle is terminated if any unapproved accessory equipment has been added to the vehicle, or if any modifications have been made to the vehicle that increase its speed or power.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion and eventually death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas.
- Never run the vehicle outdoor where engine exhaust can be drawn into a building through openings such as windows and doors.

OPERATOR SAFETY

Avoid Gasoline Fires and Other Hazards

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Strictly adhere to proper fueling procedures.
- Never start or operate the engine if the fuel cap is not properly installed. Gasoline is poisonous and can cause injury or death.
- Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye (s) , or inhale gasoline vapor, see a doctor immediately.
- If gasoline spills on you, wash with soap and water and change your clothes.

Fuel Minimum Octane Rating and Safety Warnings

The recommended fuel for your vehicle is 87 octane or premium unleaded only (a maximum blend of 10% ethanol is allowed). Non-oxygenated (ethanol-free) fuel is recommended for best performance in all conditions.

OPERATOR SAFETY

WARNING

Gasoline is highly flammable and explosive under certain conditions.

Allow the engine and exhaust system to cool before filling the tank.

Always exercise extreme caution whenever handling gasoline.

Always refuel with the engine stopped, and outdoors or in a well ventilated area.

Do not smoke or allow open flames or sparks in or near the area where refueling is performed, or where gasoline is stored.

Do not overfill the tank. Do not fill to the tank neck.

If gasoline spills on your skin or clothing, immediately wash it off with soap and water and change clothing. Never start the engine or let it run in an enclosed area. Engine exhaust fumes are poisonous and can cause loss of consciousness or death in a short time.

The engine exhaust from this product contains chemicals known to cause cancer, birth defects or other reproductive harm. Operate this vehicle only outdoors or in well-ventilated areas.

Avoid Burns from Hot Parts

The exhaust system and engine become hot during operation. Avoid contact during and shortly after operation to avoid burns.

OPERATOR SAFETY

Owner Responsibilities

Be Qualified and Responsible

Read this Owner's Manual and the warning decals on this vehicle carefully. Take a safety training course on open areas if available. Practice at low speeds. Higher speeds require greater experience, knowledge and suitable riding conditions. Become completely familiar with the operational controls and the general operation of the vehicle.

This vehicle is an ADULT VEHICLE ONLY. The operator must acquire a driving license as required by local laws and regulations. Operators must be tall enough with physical capacity to: be properly seated, hold the handlebar with both hands, fully stroke the clutch lever with the left hand, fully stroke the brake lever with the right hand, fully stroke the foot brake lever with the right foot, be able to firmly plant both feet on the foot pegs, and be able to balance the vehicle with the feet when stopped.

Carrying a Passenger

- The operator must acquire a driving license as required by local laws and regulations for models equipped to carry passengers.
- Only carry one passenger. The passenger must be properly seated in the passenger seat. The passenger should be tall enough to always be properly seated when holding handhold, and feet firmly planted on the foot pegs.
- Instruct the passenger to read the vehicle's safety labels.
- Never carry a passenger who has used drugs or alcohol, or is tired or ill. These slow reaction time and impair judgment.
- Never carry a passenger if you judge their ability or judgment is insufficient to concentrate on the terrain conditions and adapt accordingly.

OPERATOR SAFETY

Safe Riding Gear

Always wear clothing suited to the type of riding for the driver and passenger, includes:


- 1 An approved helmet
- 2 Eye protection
- 3 Gloves
- 4 Long sleeve shirts or jackets
- 5 Long pants
- 6 Over-the-ankle boots

According to the actual weather, you may need extra apparel, such as anti-fog eye protection, thermal underwear and a face guard for cold weather. The operator must never wear loose clothing that may get entangled in the vehicle or on tree branches and shrubs.

Helmet and Eye Protection

An approved helmet can prevent a serious head injury if an accident occurs. Please note that even the best helmet is no guarantee against injury.

The helmet you choose should meet the standard for your country or area. A closed-face helmet with face shield will be better at preventing impacts from insects, flying rocks, dust and scattered debris, etc.

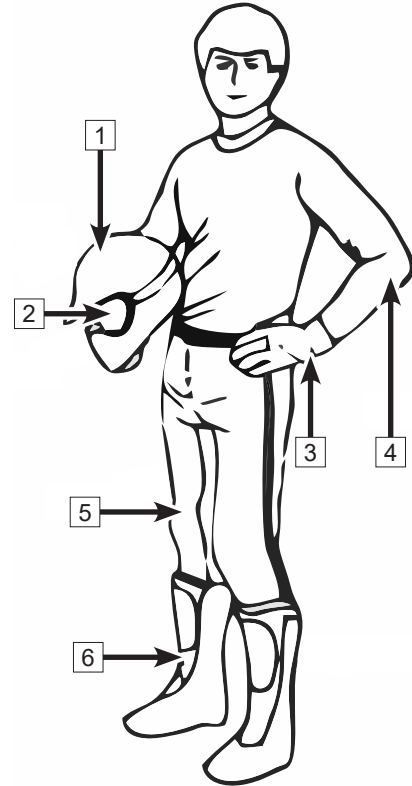

OPERATOR SAFETY

An open-face helmet cannot offer the same protection for your face and jaw. Please wear detachable face masks and goggles when wearing an open-face helmet.

Do not depend on eyeglasses or sunglasses for eye protection, as they are not rated for impact protection. Debris may fly up and or break the lens, causing eye injury.

Use tinted masks or goggles only during the day in bright light, do not use them at night or in poor light. They may affect your ability to distinguish colors. Do not use them if your color discrimination is affected.

Gloves

Full-finger gloves could protect your hands from wind, sun, heat, cold, and splash. Well-fitted gloves are helpful for steering and relieve hand fatigue. If the gloves are too heavy, it will be difficult to operate the vehicle.

A pair of strong motorcycle gloves offer protection for your hands in the event of an accident or turnover. Snowmobile gloves offer better protection when operating in cold areas.

Jackets, Pants and Motorcycle Suits

Wear a jacket or a long sleeved shirt and long pants, or a full riding suit. Quality protective gear will provide comfort, and it can help you avoid being distracted by adverse environmental elements. In case of an accident, good quality protective gear made of sturdy material may prevent or reduce injury.

In cool-weather riding, protect yourself against hypothermia. Hypothermia, a condition of low body temperature, can cause loss of concentration, slowed reactions and loss of smooth, precise muscle movement. In cool conditions, proper protective gear like a windproof jacket and insulated layers of clothing are essential. Even while riding at moderate temperatures, you can feel very cold due to the wind. Protective gear that is appropriate for cold-weather riding may be too hot when stopped. Dress in layers so that clothing can be removed as desired. Topping the protective gear with a windproof outer layer can prevent cold air from reaching the skin.

OPERATOR SAFETY

Boots

Always wear closed-toe, over-the-ankle boots. Sturdy over-the-ankle boots with non-slip soles offer more protection, and allow you to plant your foot properly on the foot pegs. Avoid long shoelaces that could get tangled in the vehicle components. For winter riding conditions, rubber-soled boots with either nylon or leather uppers and removable felt liners are best suited. Avoid rubber rain boots. Rubber rain boots may get trapped behind the foot brake pedal, impairing proper operation.

Other Riding Gear

Rain Gear

When riding in rainy weather, a rain suit or a waterproof riding suit is recommended. On long rides, it is a good idea to carry rain gear. Keeping clothes dry results in being much more comfortable and alert.

Hearing Protection

Long-term exposure to wind and engine noise when riding can cause permanent hearing loss. Properly worn hearing protective devices such as earplugs can help prevent hearing loss. Check local laws before using any hearing protective devices.

OPERATOR SAFETY

Potential Hazard Warnings

WARNING

POTENTIAL HAZARD:

Operating this vehicle without proper instruction.

WHAT CAN HAPPEN:

The risk of an accident is greatly increased if the operator does not know how to operate the vehicle properly in different situations and on different types of terrain.

HOW TO AVOID THE HAZARD:

Beginning and inexperienced operators should complete a safety training course if offered by dealer. Operators should regularly practice the skills learned in the course and any operating techniques described in the owner's manual.

WARNING

POTENTIAL HAZARD:

Failure to follow the age recommendations for this vehicle.

WHAT CAN HAPPEN:

Severe injury and/or death could occur if a child under the minimum age recommendation operates this vehicle. Even though a child may be within the recommended age group for operating, he/she may not have the skills, abilities, or judgment needed to operate safely and could be susceptible to accident or injury.

HOW TO AVOID THE HAZARD:

The operator must acquire a driving license as required by local laws and regulations.

OPERATOR SAFETY

⚠️ WARNING

POTENTIAL HAZARD:

Operating this vehicle without wearing approved helmet, eye protection, and protective clothing.

WHAT CAN HAPPEN:

Operating without an approved helmet increases the risk of a severe head injury or death in the event of an accident. Operating without eye protection could result in an accident and could increase the chance of a severe eye injury in the event of an accident. Operating without protective clothing could increase the chance of a severe injury.

HOW TO AVOID THE HAZARD:

Always wear an approved helmet that fits properly. Always wear eye protection (goggles or face shield) , gloves, long-sleeved shirt or jacket, long pants, and over-the-ankle boots.

⚠️ WARNING

POTENTIAL HAZARD:

Operating the vehicle after consuming alcohol or drugs.

WHAT CAN HAPPEN:

Consumption of alcohol and/or drugs could seriously affect operator judgment. Reaction time may be slower and operator balance and perception could be affected. Consumption of alcohol and/or drugs before or while operating a vehicle could result in an accident causing severe injury or death.

HOW TO AVOID THE HAZARD:

Never consume alcohol or drugs before or while operating the vehicle.



OPERATOR SAFETY

WARNING

POTENTIAL HAZARD:

Operating at excessive speeds.

WHAT CAN HAPPEN:

Excessive speed increases the operator's chance of losing control, which can result in an accident.

HOW TO AVOID THE HAZARD:

Always operate at a speed that's proper for the terrain, visibility and operating conditions, and your experience.

WARNING

POTENTIAL HAZARD:

Attempting slides, jumps, and other stunts.

WHAT CAN HAPPEN:

Attempting stunts increases the chance of an accident, including an overturn.

HOW TO AVOID THE HAZARD:

Never attempt slides, jumps, or other stunts.

OPERATOR SAFETY

WARNING

POTENTIAL HAZARD:

Failure to inspect the vehicle before operating. Failure to properly maintain the vehicle.

WHAT CAN HAPPEN:

Poor maintenance increases the possibility of an accident or equipment damage.

HOW TO AVOID THE HAZARD:

Always inspect your vehicle before each use to make sure it is in safe operating condition.

Always follow the inspection and maintenance procedures and schedules described in the owner's manual.

WARNING

POTENTIAL HAZARD:

Operating this vehicle with improper tires, or with improper or uneven tire pressure.

WHAT CAN HAPPEN:

Use of improper tires, or operation of the vehicle with improper or uneven tire pressure, could cause loss of control or an accident.

HOW TO AVOID THE HAZARD:

Always use the size and type of tires specified in the owner's manual. Always maintain proper tire pressure.

OPERATOR SAFETY

WARNING

POTENTIAL HAZARD:

Operating the vehicle with improper modifications.

WHAT CAN HAPPEN:


Improper installation of accessories or modification of the vehicle may cause changes in handling which could lead to an accident.

HOW TO AVOID THE HAZARD:

Never modify the vehicle through improper installation or use of accessories. All parts and accessories added to the vehicle must be genuine parts or equivalent components designed for use on this vehicle, and they should be installed and used according to approved instructions. Consult your dealer for more information.

VEHICLE VIEW


Rear Left View

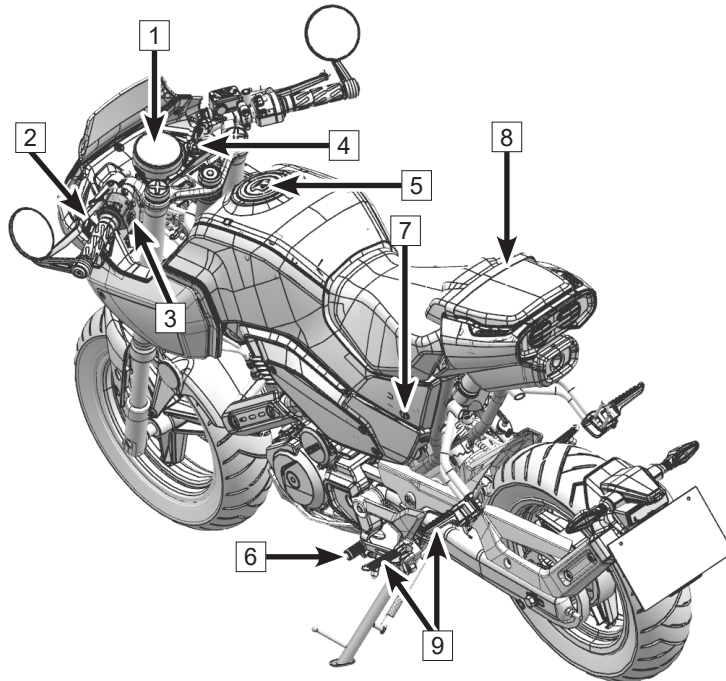

- 1: Instrument
- 2: Clutch Lever
- 3: Handlebar Switch, LH
- 4: Ignition Switch Lock
- 5: Fuel Tank Lock
- 6: Gear Shift Lever
- 7: Seat Lock
- 8: Passenger Handhold
- 9: Footrest

VEHICLE VIEW

Front Right View

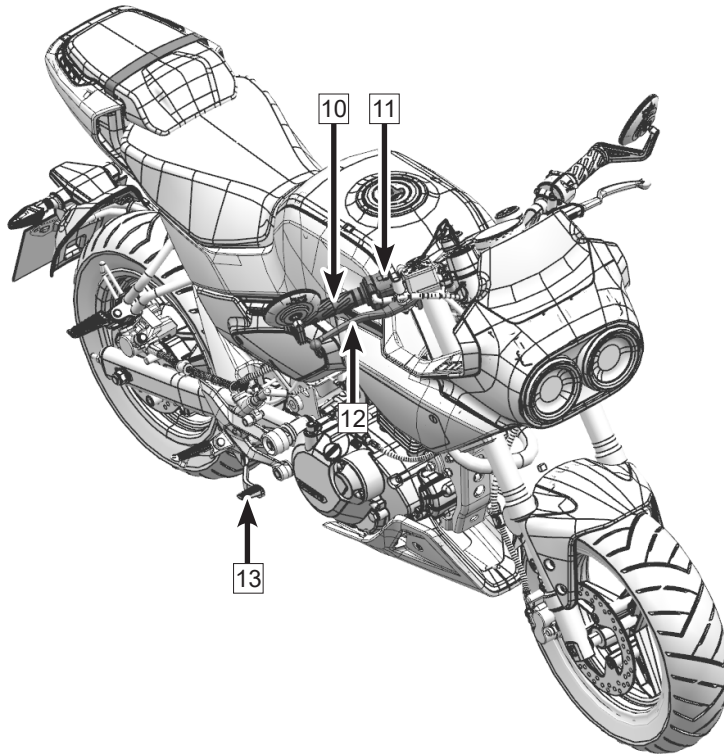

10: Throttle Grip

11: Handlebar Switch, RH


12: Front Hand Brake Lever

13: Rear Brake Lever

CONTROLS & FEATURES


Clutch Lever

Clutch lever **1** is on the left side of handlebar. The clutch is cable-operated type.

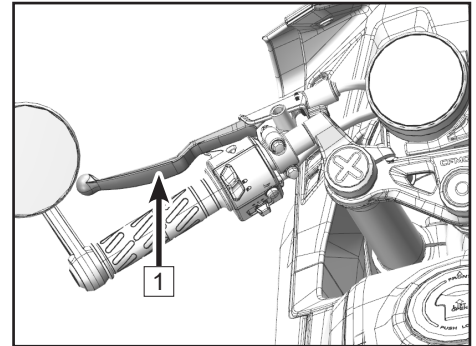

Front Hand Brake Lever

Front hand brake lever **2** is on the right side of handlebar. Front brake caliper activates braking by pulling in the hand brake lever.

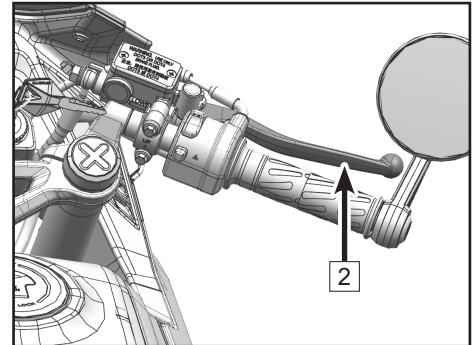










CONTROLS & FEATURES

Handlebar Switch, LH

Left handlebar switch **1** is on the left side of the handlebar.

Functions of left handlebar switch:

2	Dimmer Push Switch		Turn to this position, high beam lights on.
			Turn to this position, low beam lights on.
3	Turning Light Switch		Push this switch to the right, the right turning light will activate.
			Push this switch to the left, the left turning light will activate.
4	Horn Button		Short press, the horn will sound.
5	Passing Light Switch		Short press this button, passing light will flash.

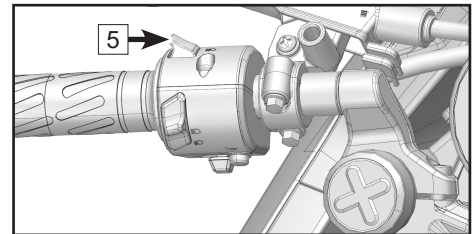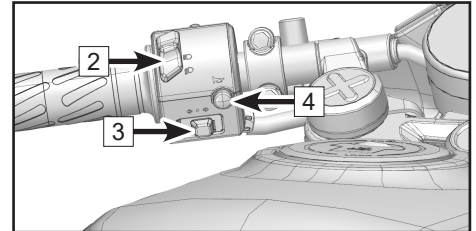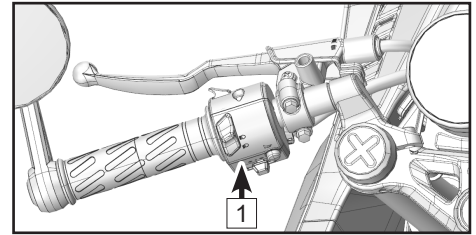







CONTROLS & FEATURES

Handlebar Switch, RH

Right handlebar switch **1** is on the right side of the handlebar.

Right handlebar switch function


2	Stop Switch		Turn to this position, the vehicle turns off.
			Turn to this position, the vehicle is ready to start.
			Turn to this position, the vehicle starts.
3	Hazard Flasher Switch		Short press to turn on the hazard flasher light.

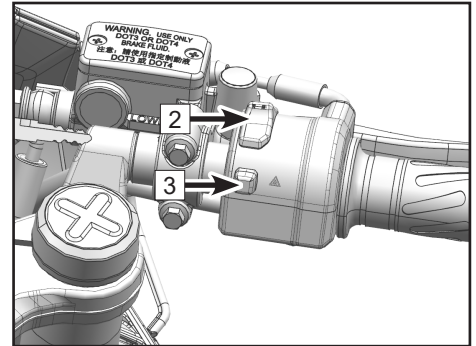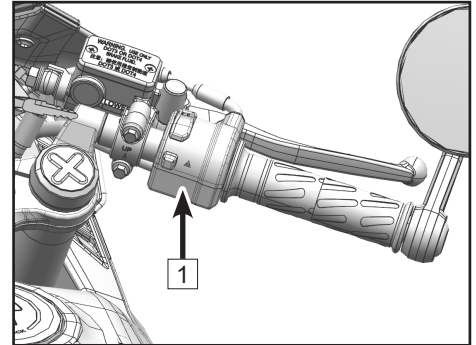

CONTROLS & FEATURES




Throttle Grip

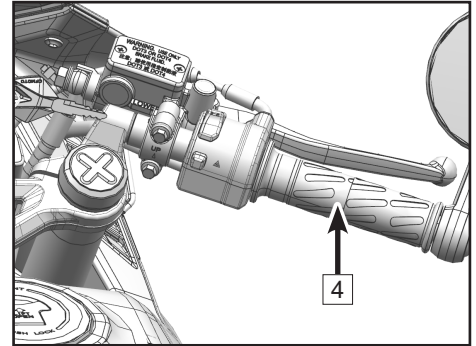
Throttle grip **4** is on the right side of handlebar.



Locks

Ignition Switch **1**

Steering Lock		Turn the handlebar to the left, then turn the key to the lock indicator to lock the steering.
Turn Off		Turn the key to this position, the engine cannot be started and the vehicle power circuit is disconnected.
Start		Turn the key to this position, the engine can be started and the vehicle power circuit is connected.

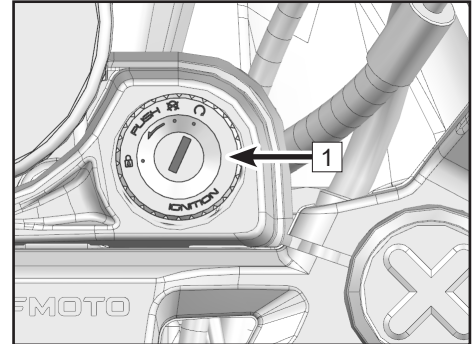


CONTROLS & FEATURES

Fuel Tank Lock 2

To open the fuel tank:

- Stop the vehicle and turn off the engine.
- Open the fuel tank lock cover.
- Insert the key and turn to release the lock.
- Open the fuel tank cap.

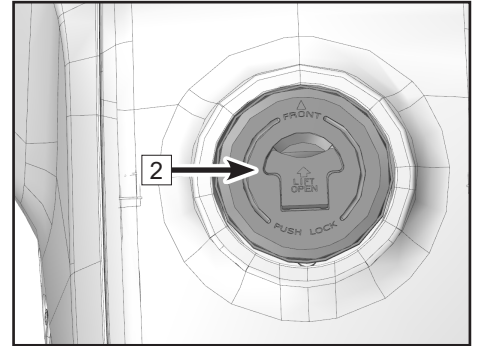


CONTROLS & FEATURES

Seat Lock 1

The seat lock is on the left side of the vehicle.


The seat can be removed by inserting the key and turning to release the lock.

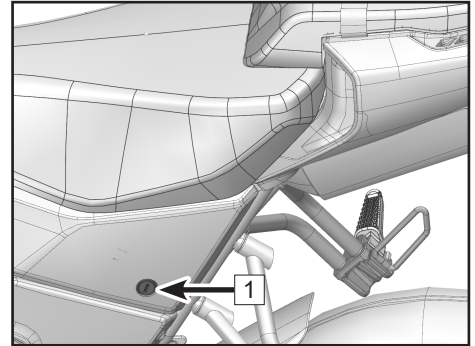

Gear Shift Lever 2

The gear shift lever 2 is on the left side of the engine.


The transmission shifting pattern is shown in the image.

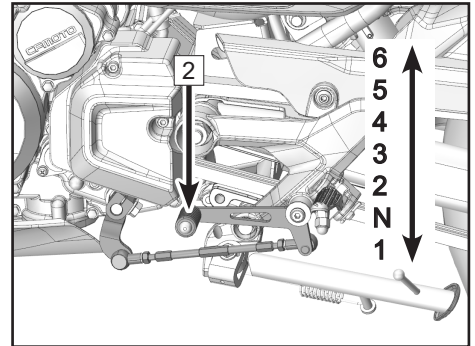

CONTROLS & FEATURES


Rear Brake Lever

The rear brake lever **1** is on the right side of the vehicle. Press down on the rear brake lever with the right foot to slow down or stop the vehicle.

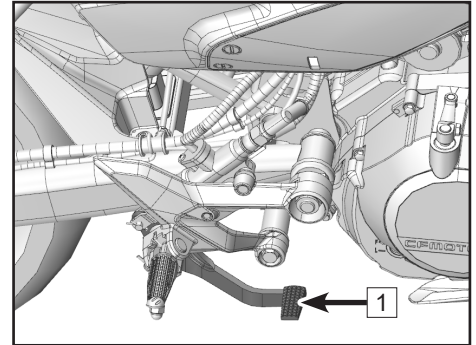

Side Stand


The side stand **2** is on the left side of the vehicle, and is used for parking.

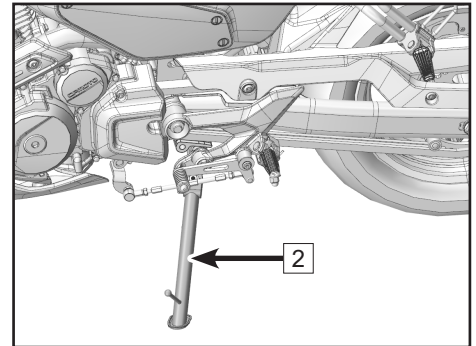


CONTROLS & FEATURES

Passenger Handhold and Footrest

A passenger handhold **1** is mounted on the motorcycle seat for passenger to hold on during riding.

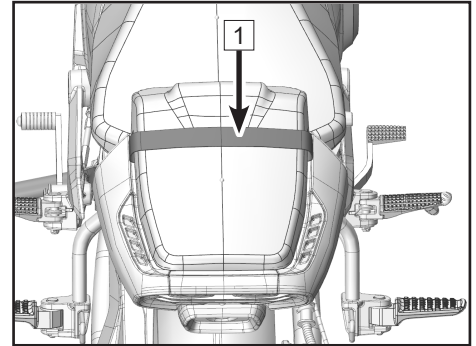


Footrests **2** are mounted on the motorcycle for the operator and passenger.

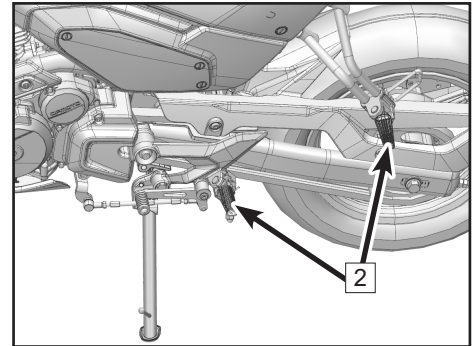

CONTROLS & FEATURES

Instrument

Instrument Indicators

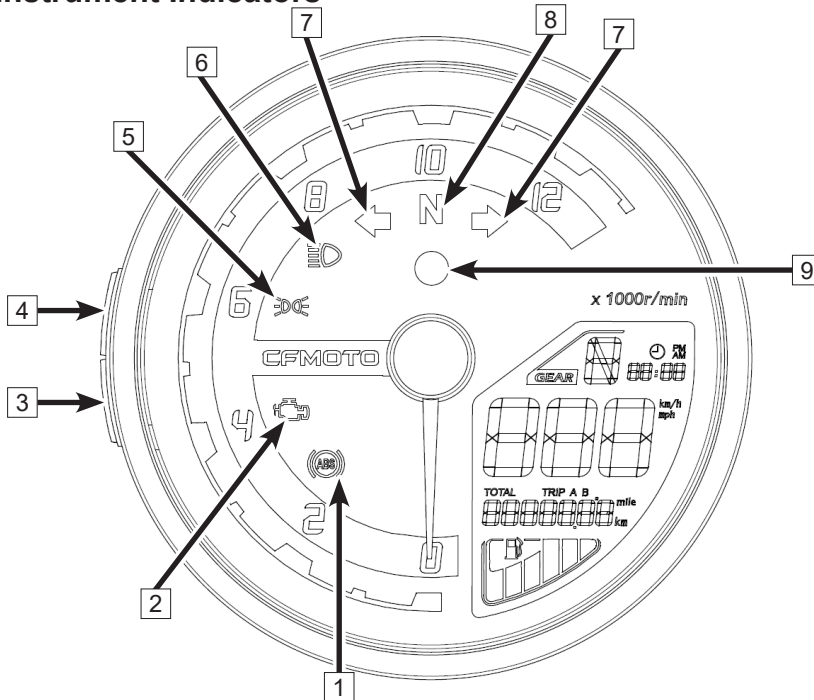

1	ABS Indicator (if equipped)
2	EFI Fault Indicator
3	ADJ Button
4	SET Button
5	Position Light Indicator
6	High Beam Indicator
7	Turn Signal Indicator
8	Neutral Indicator
9	Gear Shifting Indicator

CONTROLS & FEATURES

ABS Indicator (Select Markets) - 1

When turning on the ignition switch, the ABS indicator will turn on, and then turn off after the motorcycle begins traveling. If there is any ABS fault, ABS indicator will illuminate.

EFI Fault Indicator - 2

When turning on the ignition switch, the EFI fault indicator will turn on, and then turn off after the motorcycle begins traveling. If the vehicle EFI system detects a fault, this indicator will illuminate.

ADJ Button - 3

To adjust or set the instrument functions. Use together with SET button.

SET Button - 4

To select the instrument functions. Use together with ADJ button.

Position Light Indicator - 5

When turning on the ignition switch, the indicator will illuminate.

 
High Beam Indicator - 6

When the dimmer switch is on this position “”, high beam indicator will illuminate.

CONTROLS & FEATURES

Turn Signal Indicator - 7

When turning light switch is on this position “”, the left turn signal indicator will flash.

When turning light switch is on this position “”, the right turn signal indicator will flash.

Neutral Indicator - 8


When the vehicle transmission is in neutral position, this indicator will illuminate.

Gear Shifting Indicator - 9

When the engine RPM reaches set shifting threshold (6500 RPM by default), the shifting indicator is on.

CONTROLS & FEATURES

Instrument Display

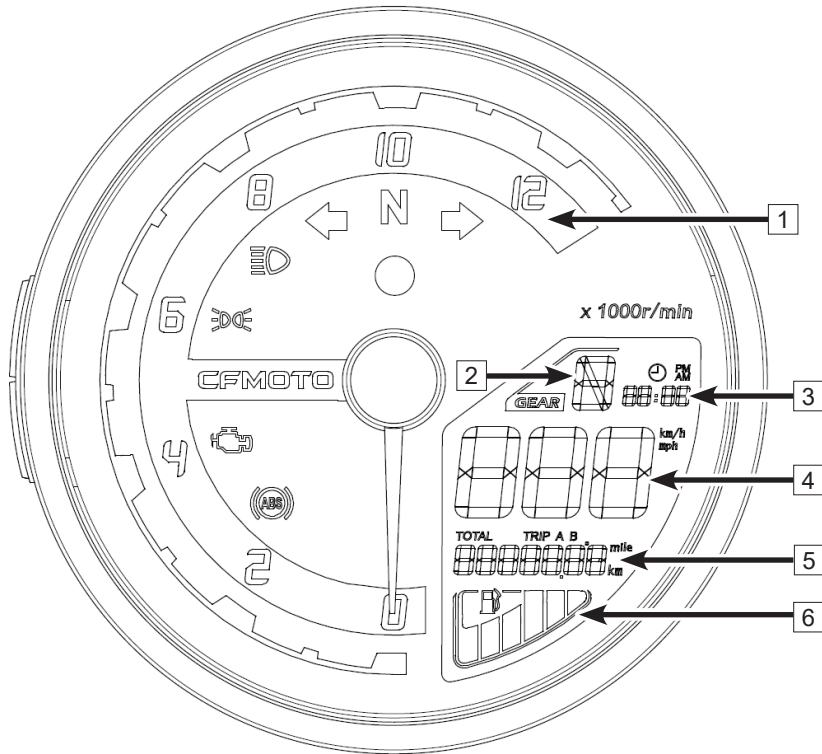

1	Tachometer
2	Gear
3	Clock
4	Speed
5	Mileage
6	Fuel

CONTROLS & FEATURES

Tachometer - 1

Displays the engine rotating speed.

Gear - 2

Displays the current vehicle gear position.

Clock - 3

Displays the current time.

Speed - 4

Displays the current vehicle speed.

Mileage - 5

Displays Total trip, Trip A and B, Battery voltage and Brightness.

Fuel - 6

Displays the current fuel volume. When the fuel gauge indicator flashes, please arrange your travel properly and fill the fuel tank as soon as possible.

CONTROLS & FEATURES

Instrument Adjustments

Inscriptions for button: Press means less-than-1 second operation.

Item	Display	SET	ADJ	Operation
Display Shifting	Total trip	Press		Shift to Trip A
	Trip A	Press		Shift to Trip B
	Trip B	Press		Shift to battery voltage
	Battery voltage	Press		Shift to Brightness
	Brightness	Press		Shift to Total trip
Trip A or B Resetting	Trip A or B		Long press	Press ADJ button for no less than 3 seconds to reset Trip A or Trip B.
Time Setting	Home interface	Long press		Long press SET button for no less than 3 seconds to enter time setting (Hour) and hour digits flash.
	Hour flashing		Press or long press	Adjust hour from 0 to 23 (24 hours) or from 1 to 12 (12hours). Every press of ADJ button will add 1 hour. Long press of ADJ button for no less than 1 second will add one hour every 0.2 ±0.1 seconds (the hour digits will not flash).
	Hour flashing	Press		Enter time setting (Minute) and minute digits flash.

CONTROLS & FEATURES

Item	Display	SET	ADJ	Operation
Time Setting	Minute flashing		Press	Adjust minute from 0 to 59. Every press of ADJ button will add 1 minute. Long press of ADJ button for no less than 1 second will add one minute every 0.2 ±0.1 seconds (the minutes digits will not flash).
	Minute flashing	Press		Enter time unit setting
	Unit		Press	Shift to 12-hour or 24-hour system
	Unit	Press		Enter speed unit setting
Speed Unit Setting	Km/h		Press	Shift to mph
	Mph		Press	Shift to km/h
	Unit	Press		Enter gear shifting threshold setting
Gear Shifting Threshold Setting	Gear shifting threshold		Press or long press	Adjust gear shifting threshold from 3000 to 13000 RPM (default is 6500 RPM). Every press of ADJ button will add 100 RPM. Long press ADJ button for no less than 1 second will add 100 RPM every 0.2 ±0.1 seconds. When the threshold reaches 13000, it will reset to 3000 and continue to increase.
	Gear shifting threshold	Press		Return to Home interface

OPERATING YOUR VEHICLE

Item	Display	SET	ADJ	Operation
Brightness Setting	Brightness		Press	Adjust brightness from 1 to 5. Every press of ADJ button will add 1 level of brightness. When the level reaches 5, pressing the ADJ button will return the brightness to level 1.

OPERATING YOUR VEHICLE

Break-In Period

The break-in period for this vehicle is the first 600 miles (1000 km). Maintain the vehicle according to the break-in period requirements.

The following items should be observed during break-in period:

1. Do not run at high engine speeds immediately when the engine is just started. Allow the engine to warm for 2 ~ 3 minutes at idle speed and for oil flow into all the engine lubricating parts.
2. Do not run the engine at high RPM when the transmission is in neutral.
3. During the break-in period, CFMOTO suggests the top engine RPM as below:

Distance	Top engine RPM
0 ~ 300 Miles (0 ~ 500 km)	4000 RPM
300 ~ 600 Miles (500 ~ 1000 km)	6000 RPM

DANGER

New tires are slippery which may lose control and cause damage. Maintain tire pressures at the specified value during the 620 mile (1000 km) break-in period. Avoid sudden and maximum braking/acceleration and hard cornering during the break-in period.

OPERATING YOUR VEHICLE

Daily Safety Inspection

Checking the following items before daily riding will help keep your vehicle in safe and reliable condition. If anything appears unusual, please refer to the Maintenance and Adjustment section or contact your dealer. Do not operate the vehicle in an abnormal condition, as it may lead to serious damage or accidents.

Item	Content
Engine Oil	Inspect the oil level is at the correct level.
Rear Brake Fluid Reservoir	Inspect the rear brake fluid reservoir is at the correct level.
Rear Wheel	Inspect the rear wheel and tire for excessive wear, cracks or cuts, embedded items or other damage. Inspect the rear tire pressure is in the standard range.
Rear Brake	Inspect the thickness of rear brake pad. Inspect the thickness of rear brake disc and check for any dirt or damage.
Chain and Sprockets	Inspect the drive chain and sprockets for dirt and wear, and inspect if the chain tightness is appropriate.
Front Wheel	Inspect the front wheel and tire for excessive wear, cracks or cuts, embedded items or other damage. Inspect front tire pressure is in the standard range.
Front Brake	Inspect the thickness of front brake pad. Inspect the thickness of front brake disc and check for any dirt or damage.
Front Brake Fluid Reservoir	Inspect the front brake fluid reservoir is at the correct level.
Luggage/Cargo (if equipped)	Inspect the luggage/cargo is fastened securely, make sure the luggage/cargo height is within the requirement of local regulation.
Dashboard	Check the fault indicator.

OPERATING YOUR VEHICLE

Fuel Level	Check if the fuel tank volume is sufficient.
Rearview Mirrors	Check rearview mirrors for appropriate view angle.
Light	Check if all the lights work well, and if the beam height for front lights meets the local regulations.
Operating Parts	Inspect the handlebar, steering, front and rear brake, throttle and switches for smooth operation.
Side Stand	Check if any looseness or damage for the return spring of side stand.
Stop Switch	Check that the stop switch works correctly.

DANGER

Inspect the vehicle every time before riding the vehicle.

The operator must have the related driver's license to ride the vehicle.

Learn the local regulations, and do not ride in the areas where motorcycles are not allowed.

Do not start the vehicle in a closed area or an area without a good ventilation system. The exhaust generated during engine operation may cause people to lose consciousness or even cause death.

OPERATING YOUR VEHICLE

Starting

Sit on the vehicle with side stand up.

Turn on the ignition switch.

Place the transmission in Neutral.

Turn the stop switch to position “”.

CAUTION

Immediate engine running at high RPM in cold temperatures negatively impacts the engine lifespan. Always warm the engine at low RPM before operation.

Before the instrument self-inspection, do not activate the start switch to start the vehicle.

With the clutch lever pulled in and the transmission in gear, the vehicle can be started.

OPERATING YOUR VEHICLE

Starting Off

Pull in the clutch lever, shift the gearshift lever downward for gear 1, then slowly release the clutch lever while at the same time applying gentle throttle input.

Shifting, Riding

Pull in the clutch lever and release the throttle.

Shift the gearshift lever upward for gears 2,3,4,5,6 (as required).

Release the clutch lever and slowly apply the throttle at the same time to complete the gear shift.

Hold the handle bar at all times with both hands when driving with the throttle applied.

WARNING

Avoid any abrupt load alterations or strong brake operation, which can cause an out of control vehicle.

Adjust the speed according to road conditions and situation around you.

When the engine RPM is high, do not shift into lower gears. Release the throttle first and reduce the engine speed.

All adjustments for vehicle operation should be made when vehicle is at a standstill.

The passenger must be seated properly on the passenger seat with feet on the rear foot pegs, wearing a helmet and other safety protection, and holding onto the operator or grab handle.

OPERATING YOUR VEHICLE

WARNING

Comply with the local traffic regulations for minimum passenger age.

Comply with all local traffic regulations. Ride defensively and foresightedly to detect sources of danger early on.

When the tires are cold, their road grip performance is reduced. Use caution and drive with average speed for several miles (kilometers) until the tires arrive at their available temperature.

Do not exceed the permitted full payload. Full payload includes the vehicle weight with full fuel tank, driver, passenger and luggage/cargo.

Luggage/cargo sliding will effect the handling performance, inspect that it is fixed tightly on the vehicle, and that the width does not exceed 5.9 in. (0.15m) from the handle bar end for both left and right sides.

In the event of an accident, the damage from crashing could be more serious than it looks. Inspect the vehicle completely to make sure it is safe, or take the vehicle to a CFMOTO dealer for inspection.

Improper gear shifting may lead to damage of the transmission.

Apply the throttle according to the road conditions and climate. Do not shift gears and be cautious to apply the throttle especially during turnings.

OPERATING YOUR VEHICLE

Brake

Release the throttle when applying the brake, and use front and rear wheel brake for braking at the same time.

Finish braking before turning, and shift to a lower gear according to the speed required.

On long distance downhills, use the engine to compression brake and shift to lower gears, but do not allow the engine to operate with high RPM. When using engine brake effect, it helps to reduce the braking force required of the brake system, and reduce the chance of overheat.

WARNING

Moisture and dirt impair the brake system. Brake carefully several times to dry out moisture and remove dirt from the brake pads and discs.

If the hand brake lever and foot brake lever feel soft, stop riding until the brake system is fully inspected and the fault eliminated.

Take your foot off the foot brake lever when you are not braking. Long-time pressing of the foot brake will cause brake lining overheating and excessive friction, which will affect service life and safety.

When carrying a passenger or luggage/cargo, the required braking distance will increase. Please adjust the brake time according to vehicle load.

OPERATING YOUR VEHICLE

Parking

Stop the vehicle with brake.

Shift the transmission to Neutral.

Turn off the ignition switch.

Park the vehicle on firm, level ground.

Use side stand to support vehicle.

Turn the handlebar to the maximum left angle, and lock the steering with the key.

Remove the key.

WARNING

When engine is running, do not leave the vehicle unattended.

Secure the vehicle against use by unauthorized persons.

Lock the steering when leaving the vehicle unattended.

After running the vehicle, the temperature will be very high for some parts. Do not touch any parts such as the exhaust system, cooling system, engine, or brake system before the vehicle parts have cooled down.

Do not park the vehicle near materials that are highly flammable or explosive. High temperature parts may ignite the materials.

Using incorrect procedures when parking may cause vehicle to roll away and fall over, which will lead to significant damage.

SAFETY OPERATION

Safe Riding Technique

The following cautions are applicable for daily motorcycle use and should be carefully observed for safe and effective vehicle operation:

- For safety, eye protection and a helmet are strongly recommended. You must be aware of safety regulations prior to riding the motorcycle. Gloves and suitable footwear should also be used for added protection.
- Wear protective apparel when riding in case of any collision. Protective apparel cannot protect the body safely if it is not worn.
- Before changing lanes, look over your shoulder to make sure the way is safe. Do not rely solely on the rearview mirrors. You may misjudge a vehicle's distance and speed, which can easily cause an accident.
- When going up steep slopes, shift to a lower gear so there's plenty of power and engine torque rather than overloading the engine.
- When applying the brakes, apply both the front and rear brakes at the same time. Applying only one brake for sudden braking may cause the motorcycle to skid and lose control.
- When going down long downhill slopes, control vehicle speed by releasing the throttle. Use the front and rear brakes for auxiliary braking.
- In wet conditions, rely more on the throttle to control vehicle speed and less on the front and rear brakes. The throttle should also be used judiciously to avoid skidding the rear wheel during rapid acceleration or deceleration.

SAFETY OPERATION

- Riding at the proper speed and avoiding unnecessary acceleration are important not only for safety and low fuel consumption, but also for longer vehicle life and quieter operation.
- When riding in wet conditions or on loose roadway surfaces, vehicle performance will be reduced. All of your actions should be smooth under these conditions. Sudden acceleration, braking or turning may cause loss of control.
- Practice your operating skills. In an empty area, exercise cautiously, slow down, and grip the fuel tank with the knees for better stability. When quick acceleration is necessary as in passing, shift to a lower gear to obtain the necessary power.
- Do not downshift at high RPM to avoid damage to the engine.
- Avoid unnecessary use of fabric tape which may entangle the rider or motorcycle.

SAFETY OPERATION

Additional Cautions for High Speed Operation

Brakes: Braking is very important, especially during high speed operation. It cannot be over-forced. Check and replace pads more often to get better performance.

Handling: Looseness in the handling parts may cause loss of control. Check to see whether the handlebar turns freely but has no shaking, and that the wheels turn without shaking or looseness.

Tires: High speed operation requires that tires be in good condition. Good condition tires are crucial for riding safety. Inspect their overall condition, inflate them to the proper pressure, and check the wheel balance.

Fuel: Have sufficient fuel onboard for high speed operation.

Engine Oil: To avoid engine failure which could result in a loss of control, make sure the oil level is maintained between the upper and lower level lines.

Electrical Equipment: Make sure that the headlights, tail/brake light, turn signals, horn and etc. work properly.

Fasteners: Make sure that all nuts and bolts are tight and that all safety-related parts are in good condition.

DANGER

Follow all traffic regulations. Do not ride on the highway over posted speed limits. Riding at too high speed on the highway will violate related regulations. Motorcycles may be forbidden to operate on the highway in some areas.

MAINTENANCE

Careful periodic maintenance will help keep your vehicle in the safest, most reliable condition. Inspection, adjustment, and lubrication of important components are explained in the maintenance schedule.

Inspect, clean, lubricate, adjust, and replace parts as necessary. When inspection reveals the need for replacement parts, always use genuine parts available from your dealer.

NOTE:

Periodic service and adjustments are critical. If you are not familiar with performing safe service and adjustment procedures, have a qualified dealer perform the required maintenance for you.

Pay special attention to the engine oil level during cold weather operation. A rise in engine oil level can indicate contaminants collecting in the oil sump or crankcase. Change oil immediately if the oil level begins to rise. Monitor the oil level, and if it continues to rise, discontinue use and determine the cause, or see your dealer.

Severe Use Definition

CFMOTO defines severe vehicle use as:

- Racing or race-style high RPM use
- Prolonged low speed, heavy load operation
- Extended engine idle
- Short trip cold weather operation
- Vehicles used in commercial or rental operations

If your vehicle use matches any of these definitions, decrease the service intervals by 50%.

MAINTENANCE

Key Points of Lubrication Schedule

Check all components at the intervals outlined in the Periodic Maintenance Schedule. Items not listed in the schedule should be lubricated at the general lubrication interval.

- Change lubricants more often under severe use, such as wet Or dusty conditions.
- Lubricate before long periods of storage, after pressure washing, or after submerging drive system.

Item	Lubricant	Method
Engine Oil	First choice: SAE 10W-40 Second choice: SAE 5W-40 / SAE 15W-40 JASO-MA2 certification required	Inspect the level from the engine oil view window.
Brake Fluid	DOT3 OR DOT4	Keep level between upper and lower lines

MAINTENANCE

Break-In Maintenance Schedule

Item	Break-In Maintenance Interval (Service whichever interval comes first)				
	Calendar	Miles	Km	Remarks	
Engine					
■ Engine Oil and Oil Filter	-	600	1000	Replace	
Idle	-	600	1000	Inspect	
Throttle System	-	600	1000	Inspect, adjust if necessary	
Drive Chain and Sprockets		600	1000	Inspect, lubricate and adjust if necessary	
Electrical System					
■ Functions of Electrical Parts	-	600	1000	Inspect terminals, clean and test battery if necessary	
Battery	-	600	1000		
Fuses or Circuit Breakers	-	600	1000		
Brake System					
Brake Discs	-	600	1000	Inspect	
Brake Pads	-	600	1000	Inspect	
Brake Fluid Level	-	600	1000	Inspect, add brake fluid if necessary	
Brake Lever	-	600	1000	Inspect for free play	
■ Brake Hoses	-	600	1000	Inspect for damage and sealing	

► = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Item		Break-In Maintenance Interval (Service whichever interval comes first)			
		Calendar	Miles	Km	Remarks
Wheels					
	Tire Condition	-	600	1000	Inspect and contact a CFMOTO dealer for service
	Tire Pressure	-	600	1000	
	Wheel Bearings	-	600	1000	
Suspension System					
■	Rear Shock Absorber and Front Forks	-	600	1000	Inspect for leaking
Steering System					
■	Steering Bearings	-	600	1000	Inspect, lubricate
Other Parts					
■	Diagnostic Connector	-	600	1000	Read with PDA
■	Moving Parts	-	600	1000	Lubricate, inspect for flexibility
■	Bolts and Nuts	-	600	1000	Inspect for fastness
■	Cables and Wires	-	600	1000	Inspect for damage, bending and routing

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Periodic Maintenance Schedule

Item		Periodic Maintenance Interval (Service whichever interval comes first)			
		Calendar	Miles	Km	Remarks
Engine					
	Engine Oil and Oil filter	6M	3000	5000	Replace
	Oil Strainer	6M	3000	5000	Clean
■	Clutch	-	3000	5000	Inspect, service or replace if necessary
	Idle	-	6000	10000	Inspect
	Throttle System	-	3000	5000	Inspect, service or replace if necessary
▶ ■	Air Filter Element	-	3000	5000	Inspect and clean
		24M	12000	20000	Replace
■	Spark Plug	-	3000	5000	Inspect
		-	6000	10000	Replace
■	Valve Clearance	-	1500	2500	Inspect, adjust if necessary

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Item		Periodic Maintenance Interval (Service whichever interval comes first)			
		Calendar	Miles	Km	Remarks
Electrical System					
■	Functions of Electrical Parts	12M	6000	10000	Inspect, service or replace if necessary
	Battery	6M	3000	5000	Inspect, charge if necessary
	Fuses or Circuit Breakers	6M	3000	5000	Inspect, replace if necessary
■	Wires	12M	6000	10000	Inspect for damage, bending and routing
Wheels					
	Tire Condition	12M	3000	5000	Inspect, service or replace if necessary
	Tire Pressure	12M	3000	5000	Inspect, inflate if necessary
■	Wheel Bearings	-	3000	5000	Inspect, lubricate, replace if necessary

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Item	Periodic Maintenance Interval (Service whichever interval comes first)				
	Calendar	Miles	Km	Remarks	
Brake System					
	Front and Rear Brake System	12M	3000	5000	Inspect, service or replace if necessary
	Brake Discs	12M	3000	5000	
▶	Brake Pads	12M	3000	5000	
	Brake Fluid Level	12M	3000	5000	Inspect, add brake fluid if necessary
	Brake Hoses	12M	3000	5000	Inspect for damage and sealing
■	Brake Lever	12M	3000	5000	Inspect for free play
■	Brake Fluid	24M	-	-	Replace
Suspension System					
■	Suspension System	-	3000	5000	Inspect, service or replace if necessary
■	Rear Shock Absorber and Front Forks	12M	3000	5000	Inspect for leaking

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Item	Periodic Maintenance Interval (Service whichever interval comes first)				
	Calendar	Miles	Km	Remarks	
Frame System					
▶	Frame	-	18000	30000	Inspect, service or replace if necessary
Steering System					
■	Steering Bearings	12M	3000	5000	Inspect, lubricate, replace if necessary
Chain					
▶	Chain, Rear Sprocket and Engine Sprocket	12M	3000	5000	Inspect, lubricate, replace if necessary

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Item		Periodic Maintenance Interval (Service whichever interval comes first)			
		Calendar	Miles	Km	Remarks
Other Parts					
■	Diagnosis Connector	12M	3000	5000	Read with PDA
■	Moving Parts	12M	3000	5000	Lubricate, inspect for flexibility
■	Bolts and Nuts	12M	3000	5000	Inspect for fastness
■	Cables and Wires	12M	3000	5000	Inspect for damage, bending and routing
■	Pipes, Ducts, Hoses and Sleeves	12M	3000	5000	Inspect for cracks, sealing and routing

▶ = Severe Use Item. Reduce interval by 50% on vehicles subjected to severe use.

■ = Have an authorized dealer perform repairs that involve this component or system.

MAINTENANCE

Clutch Lever Free Play

Check clutch lever smoothness.

Turn handlebar towards the left to the end.

Slowly pull the clutch lever until the resistance is evident. Check clutch lever position where the clearance is for free play.

Free play: 0.39 ~ 0.78 in. (10 ~ 20 mm)

WARNING

If there is no free play for clutch lever, the clutch will start to slip.

Check lever free play every time before starting the engine.


Set the clutch lever free play when necessary.

Clutch Lever Free Play Fine Adjustment

Turn the handlebar towards the center.

Loosen lock nut **1** and rotate the adjusting nut **2** for adjustment.


Once the desired free play is achieved, tighten the lock nut **1**.

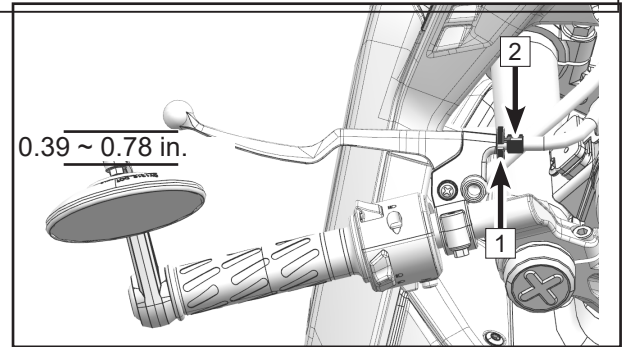

MAINTENANCE

Tool Kit

Tool kit **1** is located under the seat. The tools supplied with the vehicle are helpful for partial maintenance, disassembling and assembling.

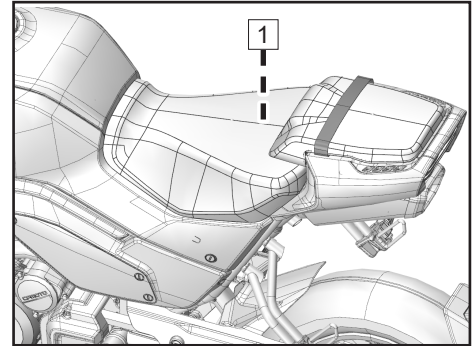

MAINTENANCE

Fuel System

Fuel Tank

Avoid spilling gasoline on the fuel tank when fill with fuel. If a spill occurs, wipe it off immediately to avoid pollution or causing danger.

Fuel Tank Volume: 1.85 gal (7 L)

DANGER

Gasoline is extremely flammable and can be explosive under certain conditions. Always fill fuel in a properly ventilated area. Before refueling, turn off the engine and wait for the engine and muffler to cool. No smoking or any acts that cause sparks is allowed in the fuel filling area or fuel storage area.

Never fill the tank excessively. Avoid overflowing onto high temperature parts. The fuel level should not exceed the tank opening. As temperature rises, fuel can heat and expand, possibly spilling over and damaging motorcycle parts.

Fuel is toxic and harmful to health. Avoid touching with skin, eyes and clothes. Do not inhale fuel vapor.

If touched skin, wash with plenty of clean water.

If touched to eyes, wash eyes immediately with clean water and see a doctor immediately.

If touched to clothes, change the clothes immediately.

If swallowed fuel by mistake, see a doctor immediately.

After maintenance or repairing parts of the fuel system, please contact your dealer for a complete inspection to avoid fuel leaks or other dangers.

Dispose of fuel properly to avoid damage to the environment.

MAINTENANCE

Fuel Requirement

This motorcycle is recommended to use only unleaded premium gasoline.

⚠ CAUTION

Do not use leaded gasoline, as it will destroy the catalytic converter. (For further understanding, please refer to more information related to the catalytic converter)

Be sure to use fresh gasoline. Gasoline oxidate, resulting in loss of octane and volatile compounds. It also produces colloidal and lacquer deposits which could damage the fuel system.

Your CFMOTO engine has been designed to use regular unleaded gasoline with a pump octane number $([R+M]/2)$ of 87 or higher. If knocking or pinging occurs, use a different brand of gasoline or premium unleaded fuel. Unleaded fuel will give you longer spark plug life and reduced maintenance cost.

MAINTENANCE

Engine

For the engine, transmission, and clutch to work properly, maintain the engine oil between the upper and lower lines on the oil window. During the engine lubrication process, oil not only builds up carbon by-product and metallic impurities, but may also consume itself by a small amount.

Inspect and change the oil in accordance with the Periodic Maintenance Chart.

⚠ DANGER

Motorcycle with insufficient, deteriorated or highly contaminated engine oil will cause accelerated wear and may result in engine or transmission seizure, accident, and injury.


Engine Oil Level Inspection

Make sure the vehicle is turned off.

If the engine had just been running, please wait for 2 to 3 minutes for the oil to settle.

Support the vehicle upright on a level surface, and then view the oil level inspection window:

- If the oil level is within area B, it is at the proper level.
- If the oil level is located at area A, drain out oil until the level is within area B.
- If the oil level is located at area C, or no oil level is viewed, fill the engine with the recommended oil until the level is within area B.

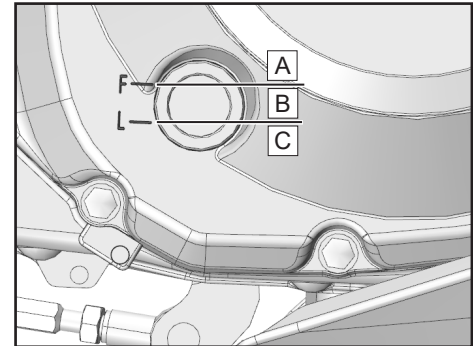

MAINTENANCE

Change Engine Oil and Oil Filter

Park the vehicle by side stand on level ground.

Idle the engine for several minutes to warm up the oil, then shut off the engine. Allow 2 to 3 minutes for the oil to settle.

⚠ WARNING

Warming up the engine for a long period may lead to high temperature of the engine and engine oil. Please wear suitable protective clothing and safety gloves when changing oil. In the event of scalding, wash the affected area immediately with running water for more than 10 minutes and seek medical attention.


Place an oil pan under the oil drain bolt.

Remove the magnetic oil drain bolt and washer **1**.

Drain out completely the used oil.

⚠ WARNING

Oil is a toxic substance. Dispose of used oil properly.

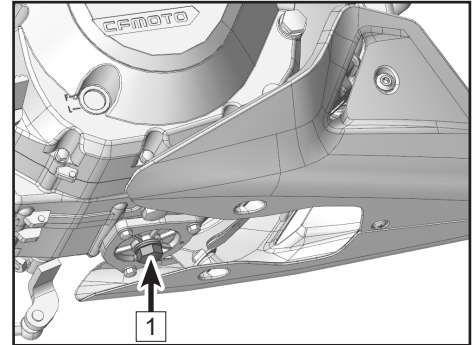

MAINTENANCE

Remove the oil filter cover nuts, the cover **2** and the old oil filter.

Apply a small amount of clean oil to the rubber seal ring of the new oil filter.

⚠ CAUTION

Before mounting the oil filter, applying a thin layer of oil on the seal ring prevents the filter from becoming stuck on the engine case.


Install the new oil filter, cover **2** and cover nuts. Torque the cover nuts to specification.

Tightening Torque: 7.3 ft-lb. (10 N•m)

Clean the oil drain bolt and the area around the oil drain hole.

Place a new washer on the oil drain bolt, then reinstall it. Torque the oil drain bolt to specification.

Tightening Torque: 18.4 ft-lb. (25 N•m)

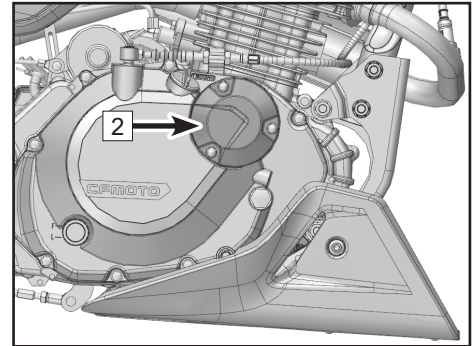

MAINTENANCE

Spark Plug


The spark plugs should be replaced in accordance with the Periodic Maintenance Chart.

Spark plug maintenance should only be performed by an authorized dealer.

Spark Plug Type: CR8E

Spark Plug Clearance 1: 0.027 ~ 0.035 in. (0.7 ~ 0.9 mm)

Tightening torque: 11.1 ft-lb. (15 N•m)

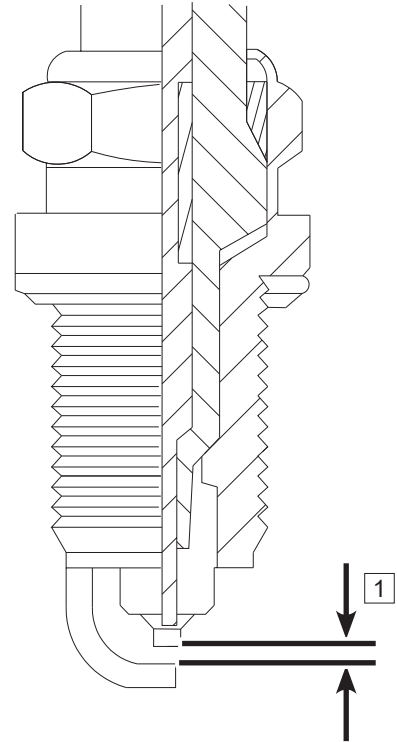


MAINTENANCE

Air Intake and Exhaust System

Fuel & Exhaust Detecting System

Fuel & exhaust system optimization is detected by an oxygen sensor **1** . An oxygen sensor installed on the exhaust pipe detects air & fuel combustion condition by measuring oxygen density and transferring it as an electrical signal to the ECU. If the ECU determines that combustion is not optimal, it will make adjustments to fuel injection in accordance with signals from the TPS and Intake Air Temperature sensors. By this way, the ratio of air against fuel can be optimized for complete combustion.

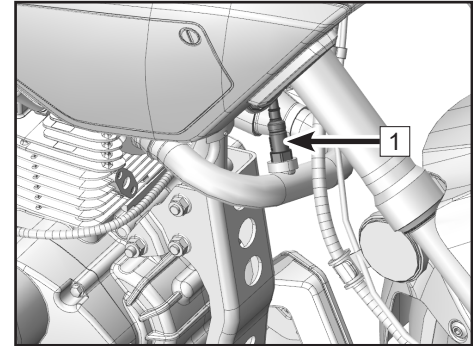

Air Intake Valve

An air intake valve is essentially a valve which allows fresh air to flow only from the air filter into the engine. Any air that passes through the air intake valve is prevented from returning. Have a dealer inspect the air intake valves in accordance with the Periodic Maintenance Chart. Also, have the air intake valves inspected whenever stable idling cannot be obtained, engine power is greatly reduced, or there are abnormal engine noises.

Air intake valve removal and inspection should only be performed by an authorized CFMOTO dealer.

MAINTENANCE

Valve Clearance

The engine valves and valve seats wear during operation. Adjustment of the valvetrain components should be performed by a dealer technician in accordance with the Periodic Maintenance Chart.

WARNING


If adjustment of the valve clearance is not performed, it will eventually result in no clearance or cause the valves remaining partly open, which reduces performance, creates valve noise, and can cause serious engine damage. Valve clearance for each valve should be checked and adjusted in accordance with the Periodic Maintenance Chart. Inspection and adjustment should be performed by a CFMOTO dealer.

MAINTENANCE

Air Filter

A clogged air filter restricts air flow, increases fuel consumption, reduces engine power, and causes spark plug fouling. The air filter element must be cleaned in accordance with the periodic Maintenance Chart. When driving in dusty, rainy, or muddy conditions, the air filter element should be serviced more frequently than the recommended interval in the periodic Maintenance Chart. Due to the vehicle's design, air filter service should be only performed by an authorized dealer.

Indicator hose **1** alerts you to excessive dirt, residual oil or water in the air filter.

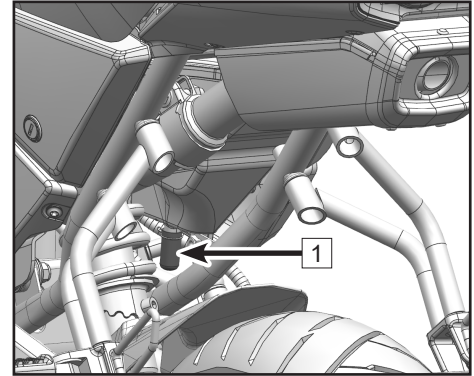

⚠ CAUTION

Oil on tires and plastic or other parts will cause damage.

If engine intakes with the unfiltered air, will have a negative effect on the service life of the engine.

Never use the vehicle without an air filter.

MAINTENANCE

Tires and Chain

This vehicle only uses tubeless tires, rims and inflating valves. Only use the recommended standard tires, rims and inflating valves. Do not install inner tube tires on tubeless rims. Do not install a inner tube inside a tubeless tire. If tires are not installed properly, it may cause tire air leakage.

Tire Specification

Tire Specification	Front wheel	120/70-12 51L
	Rear wheel	130/70-12 56L
Tire Pressure	Front wheel	29 psi (200 kPa)
	Rear wheel	32.6 psi (225 kPa)
Minimum Tread Depth	Front wheel	0.031 ~ 0.039 in. (0.8 ~ 1 mm)
	Rear wheel	0.031 ~ 0.039 in. (0.8 ~ 1 mm)

Improper tire pressure or exceeding the tire load limit may affect the vehicle handling and performance, causing a loss of control.

Make periodic inspections of the tire air pressure using a tire pressure gauge. Adjust tire pressure accordingly.

Excessive low tire pressure may cause tire improper wear or overheating.

Proper tire pressure offers the best comfort level and the longest service life.

MAINTENANCE

NOTE:

Inspect the tire pressure when the tires are cold.

Tire pressure is affected by the change of environment temperature and altitude. If the environment temperature and altitude have a big change during the driving trip, tire pressure should be adjusted and inspected accordingly.

Most countries have their own regulation for minimum tread depth. Please follow local regulations. When installing new rims or tires, always inspect for wheel balance.

CAUTION

In order to keep the handling safety and stability, please only use the tire and pressure recommended. If the tire is punctured and repaired or used within 24 hours after repairing, the vehicle speed should not exceed 37 mph (60 km/h), and cannot exceed 55 mph (90 km/h) at any other time. A punctured tire should be repaired as soon as possible.

The front and rear tires should come from the same manufacturer, with the same tread pattern.

New tires can be slippery and may cause a loss of control and injury if proper break-in is not performed. Please drive the vehicle at moderate speeds using different tilt angles to have the tires create friction with the ground over the entire surface area. Normal friction surface will be formed after a break-in period of 100 miles (160 km). Avoid sudden braking, heavy acceleration, and high-speed sharp turns during the break-in period.

Tire Payload

The maximum recommended payload is 330 lb. (150kg), including driver, luggage/cargo and accessories.

MAINTENANCE

Tire Friction

When tire tread wear exceeds the use limit, the tire becomes more susceptible to punctures and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life, so it is unsafe to continue to use tires until they are bald. In accordance with the Periodic Maintenance Chart, measure the depth of the tread with a depth gauge, and replace any tire that has worn down to the minimum allowable tread depth.

Visually inspect the tire tread for cracks and cuts, and replace with a new tire if severely damaged. For example, if partial expansion appears on the tire, it means the tire is severely damaged.

Remove any embedded stones or other foreign particles from the tread.

CAUTION

When the environment temperature is below 14°F (-10°C), it is recommended to place the vehicle indoors if required to store for a long time.

Do not use side stand to park vehicle for long time in winter. Use the park stand bracket to park the vehicle, as the tires should not bear the vehicle weight.

Do not allow the tires to sink into snow or ice when parking the vehicle in winter.

When parking vehicle for long time outside in winter, use a ground covering under tires that will insulate and protect them.

MAINTENANCE

Drive Chain Inspection

The drive chain slack and lubrication must be checked daily before riding in accordance with the Periodic Maintenance Chart for safety and preventing excessive wear. If the chain becomes badly worn or maladjusted, it will lead excessive component wear and possible failure.

If the chain is too tight, will accelerate the wear for chain, sprocket, rear sprocket and rear rim. Some parts may crack or break when placed under a load.

If the chain is too loose, The chain may fall off from sprocket or rear sprocket, which may cause locking of rear wheel or engine damage.

The service life of the drive chain largely depends on the maintenance.

Chain Dirt Inspection

Inspect periodically or inspect the chain for dirt ingress, or after driving in severe conditions.

If the chain is dirty, flush any large dirt particles with a soft jet of water. Clean any residual dirt and residual lubricant with a proper chain cleaner.

Spray the chain with a proper chain lubricant after the chain is dry.

WARNING

When spraying chain lubricant, do not splash the lubricant onto other parts. Lubricant on the tires will decrease the tire grip, and lubricant on the brake discs will decrease the brake performance. Clean these components with a proper cleaner if over-spray occurs.

MAINTENANCE

Chain Tension Inspection

Place the transmission into Neutral gear.


Park with the side stand on level ground.

Push up the middle of the chain until it stops, and measure the distance of chain movement.

NOTE: Rotate the rear wheel to different positions and repeat the measurement before adjusting chain slack.

If the chain tension is out of specification, adjust it to the standard.

Chain Tension: 1.18 ~ 1.57 in. (30 ~ 40 mm)

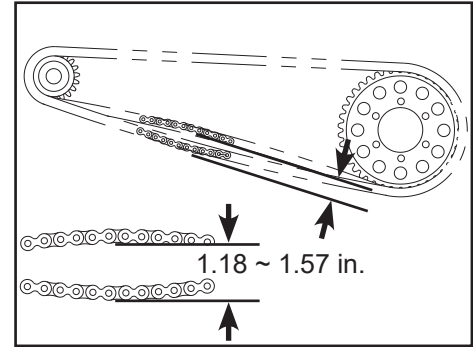

Chain Tension Adjustment

Loosen the rear wheel shaft nut **1**.

Loosen the left and right locking nuts **2**.


Adjust left and right chain tensioners evenly to ensure their alignment marks are at the same reference mark position.

Check the chain tension to ensure it meets the requirement.

Tighten the left and right locking nuts **2**.

Tighten the rear wheel shaft nut **1** to specification.

Tighten Torque: 66.4 ft-lb. (90 N·m)

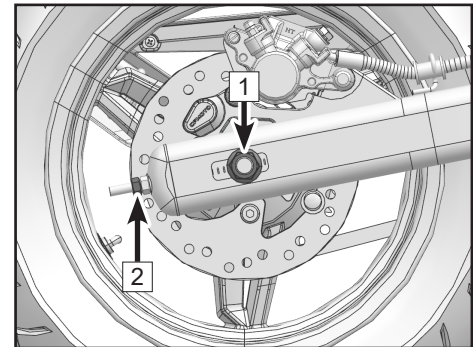

MAINTENANCE

Wear Inspection

Shift the transmission into Neutral gear.

Support the vehicle with side stand.

Apply chain tension or hang a 22 lb. (10 kg) weight from the chain.

Measure a length of 20 chain links for elongation. If the measured length exceeds the limit, replace with a new chain.



Chain Elongation Limit: 12.6 in. (320.7 mm)

DANGER

For your safety, please use the standard chain. If the chain is elongated, never cut the chain and mount back onto the vehicle. Have it replaced by an authorized CFMOTO dealer.

Inspect the rear sprocket and engine sprocket teeth for any kind of wear.

If the engine sprocket or rear sprocket is worn, replace both sprockets as a set.

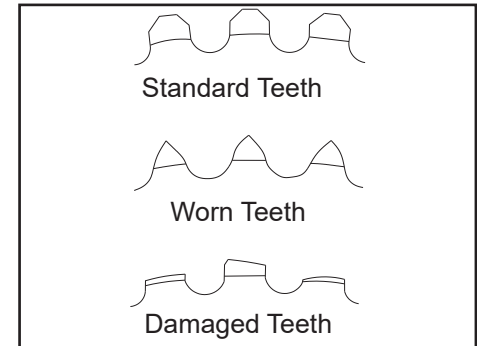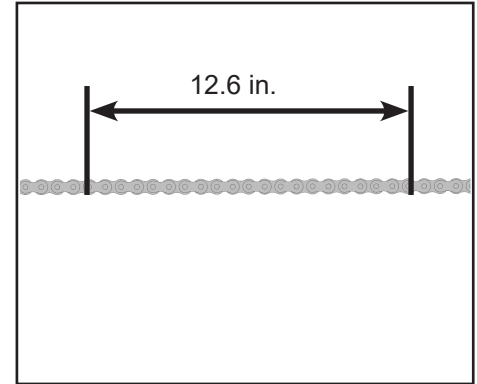

MAINTENANCE

Brake System

In order to guarantee excellent performance of your vehicle and personal safety, please repair and maintain the vehicle according to the Periodic Maintenance Chart. Make sure all the parts of the brake system are in good state. If any damage occurs to the brake system, have your vehicle inspected by authorized dealer.

Front Brake Lever Inspection


Park with the side stand on level ground.

Lightly apply the front brake lever and inspect its free play.

Free play: 0.39 ~ 0.59 in. (10 ~ 15 mm)

Inspect the front brake lever for any cracks or abnormal noise.

Replace with new parts if problems are discovered.

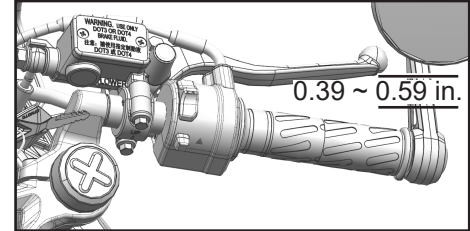

Rear Brake Pedal Inspection


Park with the side stand on level ground.

Lightly apply the rear brake pedal and inspect its free play.

Free play: 0.39 ~ 0.79 in. (10 ~ 20 mm)

Inspect the rear brake pedal for any cracks or abnormal noise.

Replace with new parts if problems are discovered.

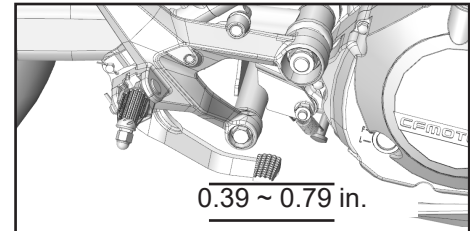

⚠ WARNING

If the brakes feel soft when applying the brake lever or brake pedal, there may be air in a brake fluid hose or lack of fluid. If the vehicle has this dangerous condition, do not drive the vehicle. Have the brake system checked immediately by an authorized CFMOTO dealer.

MAINTENANCE

Brake Fluid Level Inspection

Support the vehicle upright on a level surface.

Confirm the front and rear brake fluid reservoirs are level. Then check their fluid levels.


If the brake fluid level is within area 'B': the fluid is at the proper level.

If the brake fluid level is within area 'A': drain out the excess fluid until the level is within area 'B'.


If the brake fluid level is within area 'C' or you cannot see the level: add the same brake fluid until the level is within area 'B'.

⚠ WARNING

If brake fluid level drops to area 'C' frequently, the brake system is leaking, not sealed, or is damaged. Have the brake system checked immediately by an authorized CFMOTO dealer.

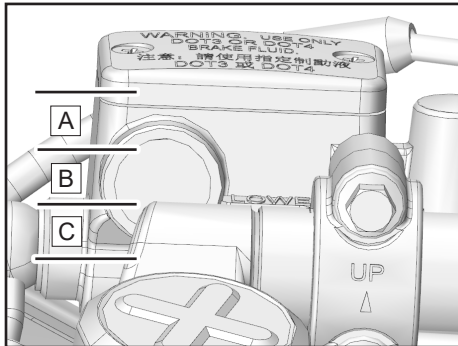

Front Brake Fluid Reservoir

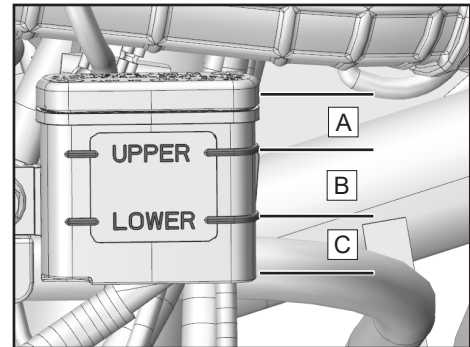

Rear Brake Fluid Reservoir

MAINTENANCE

Adding Brake Fluid

WARNING

Brake fluid causes skin irritation. Rinse the affected area with plenty of water in the event of contact with the skin.

Keep brake fluid out of the reach of children.

Keep brake fluid away from skin, eyes or clothing. Wear protective clothing and goggles when required.

Consult a doctor immediately if brake fluid has been swallowed.

Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.

If brake fluid spills onto your clothing, change the clothing.

WARNING

Brake fluid used for long time without replacement will reduce braking efficiency. Please change the brake fluid according to the Periodical Maintenance Schedule. Only use the same type DOT4 brake fluid as marked on the fluid reservoir. The mixing of different brake fluid types may cause brake system damage or failure. Please contact your authorized CFMOTO dealer for brake fluid maintenance.

NOTE

When the brake fluid level goes down, it causes negative pressure inside the fluid reservoir, which may lead to reservoir gasket sag. Remove the reservoir cap to release the pressure. Adjust the reservoir gasket and then install the gasket and cap.

MAINTENANCE

Front Brake Fluid Reservoir


Remove screws **1** .

Remove the cover and reservoir gasket **2** .

Refill brake fluid to area 'B'.

Reinstall the cover and reservoir gasket.

Install the screws.

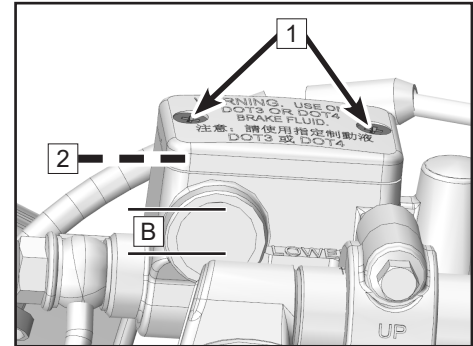

Rear Brake Fluid Reservoir


Remove screws **1** .

Remove the cover and reservoir gasket **2** .

Refill brake fluid to area 'B'.

Reinstall the cover and reservoir gasket.

Install the screws.

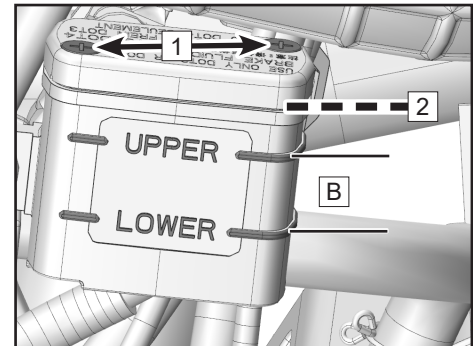


MAINTENANCE

Brake Disc Inspection

Inspect brake discs periodically for any damage, out of shape, cracks or wear. Damaged brake discs may cause braking failure. Worn-out brake discs reduce the braking distance. If brake discs are damaged or exceed the wear limit, contact an authorized dealer to replace with new brake discs immediately.

Inspect the thickness in several positions for front and rear brake discs.

Brake Disc Wear Limit: 0.12 in. (3 mm)

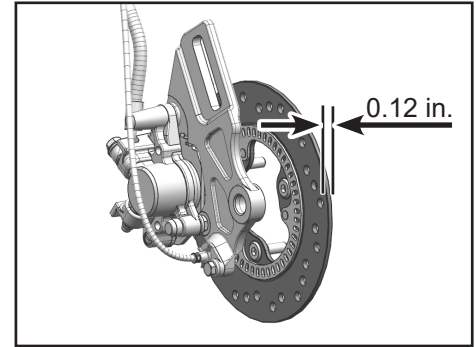


Brake Caliper Inspection

Inspect the brake calipers before riding. Inspect the brake pads for minimum thickness periodically. If the brake pad is too thin, it will cause the steel plate to rub the brake discs, which will severely reduce brake effect and damage the brake system.

Inspect the minimum thickness of brake pads on all brake calipers.

Brake Pad Minimum Thickness: 0.1 in. (2.5 mm)

If the brake pad thickness is less than the minimum limit, or the brake pad plate is damaged, please contact an authorized dealer immediately to repair the brake system.

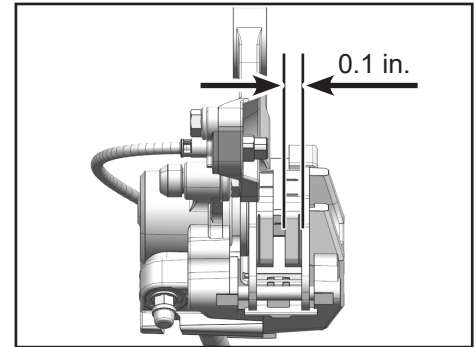

MAINTENANCE

Anti-Lock Braking System (ABS)

(Select Markets)

ABS is a safety system that prevents locking of the wheels when riding in a straight line or a curve without the influence of lateral forces.

With the assistance of ABS, riding on gritty, water-logged, slippery or other low-adhesive force roads, the vehicle can use its full brake force and with no risk of wheel locking.

 DANGER

ABS assistance can only prevent motorcycle accidents within the physical limits. In extreme driving conditions, such as high baggage loading / center of gravity, gritty or changing road conditions, steep slopes or full-speed braking without releasing the brake, an accident may occur.
--

ABS works with two independent brake circuits (front and rear brakes). When the ABS electronic control unit detects a locking tendency in a wheel, ABS begins to work by modulating the brake pressure. This adjusting process can be felt through as a slight bouncing of the front brake lever or rear brake pedal.

When turning on the ignition switch, the ABS indicator will turn on, and then turn off after the motorcycle begins traveling. If the ABS indicator is still on after travel begins or lights up again during riding, the ABS has been determined to have some fault. If a fault occurs, ABS will not activate and the wheels may lock during hard braking. In a fault situation the braking system still functions normally. Only the ABS system itself is deactivated.

MAINTENANCE

Shock Absorbers

Shock Absorber Inspection

Holding the handle bar and front brake, compress the front fork for several times to inspect for smooth function. Visually inspect the front shock absorbers for oil leaks, scratches or friction noise.

After riding, check the front shocks for any mud, dirt or debris. Clean these surfaces periodically. Failure to maintain them could lead to oil seal damage and shock oil leak.

Press down on the seat with your weight several times to check if the rear shock absorber works smoothly. Visually inspect the rear shock absorber for an oil leak.

If you have any doubt about the front or rear shock absorber performance, please contact an authorized CFMOTO dealer for immediate inspection.


Rear Shock Absorber Adjustment

The rear absorber **1** is adjusted for optimal performance before shipment from the factory, and is appropriate for most riding conditions.

Do not adjust the rear absorber spring preload without a full understanding of its effect on the suspension performance.

⚠ DANGER

This component contains high-pressure nitrogen. Improper use may cause an explosion. Read the relevant instructions. Do not expose to fire, make holes, or open it.

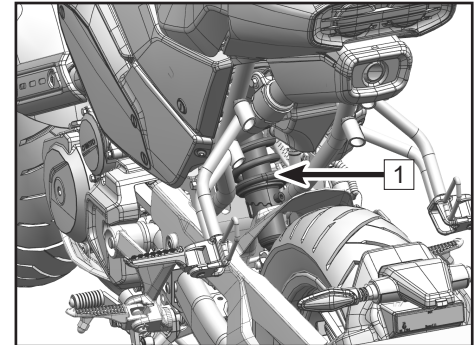

MAINTENANCE

Electrical System and Lights

Battery

The battery in this vehicle is a maintenance-free battery. Therefore, it is unnecessary to inspect the amount of battery electrolyte or add distilled water. To ensure optimum service life of the battery, keep the battery charged properly to ensure the battery has reserve capacity available at the starter motor. When the motorcycle is used frequently, battery is charged by the motorcycle charging system. If the motorcycle is only used occasionally, or used for a short time during each ride, the battery can remain discharged. Batteries can also self-discharge from infrequent use. The rate of discharge varies with battery type and ambient temperature. When environment temperature rises for example, the rate of discharge could increase by a factor of 1 for every 15°C temperature rise.

In cold weather, if battery is not charged properly it can easily cause freeze the electrolyte, which may lead to battery cracking and warp electrode plates out of shape. Proper, full charging of the battery improves freeze-proof capability.

NOTE: Due to motorcycle design and component placement, battery removal and installation is recommended to be performed by CFMOTO technicians in a properly equipped workshop.

MAINTENANCE

Battery Maintenance

Always keep the battery fully charged, or may it damage the battery and result in a shorter life.

If the vehicle is driven infrequently, inspect the battery voltage weekly with a voltmeter. If it drops below 12.8 volts, the battery should be charged with an appropriate charger (check with your dealer). If you will not use the vehicle for longer than 2 weeks, the battery should be tended with an appropriate trickle charger. Do not use an automotive type quick-charger that may overheat the battery and damage it.

Battery Recharger

Contact your dealer for battery charger specifications.

Battery Charging

Remove the battery from the vehicle before charging.

Connect the positive and negative wires from the charger and charge the battery at a rate 1/10th Amp of the battery capacity. For example, the charging rate for a 10 Amp-hour battery would be 1.0 ampere.

Ensure that the battery is fully charged before installation.

WARNING

Do not install a conventional wet-cell battery in this motorcycle. The electrical system will not work properly and damage will result.

When removing the battery, remove the negative terminal first, then the positive terminal. When installing, the connecting order is opposite of battery removal.

NOTE:

When charging a maintenance-free battery, always follow the instructions shown on the label.

MAINTENANCE

Battery Disassembly

Ensure the vehicle is on level ground and parked.

Turn off the engine and the vehicle power.



Remove the left cover **1**.

Remove the black negative wire (-).

Remove the red positive wire (+).

Remove the battery belt.

Take out the battery **2**.

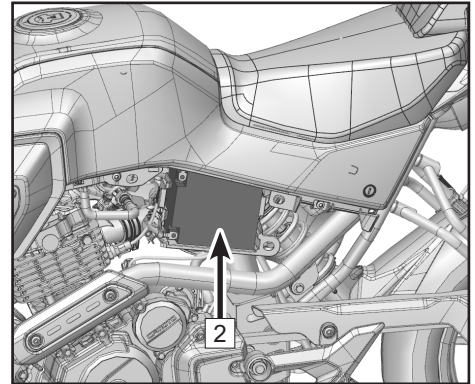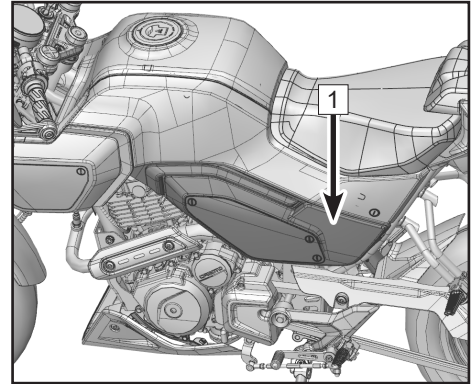

MAINTENANCE

Battery Maintenance

Apply a mixture of baking soda and water with a soft brush to clean the battery top and terminals.

Clean away dirt and any corrosion on positive and negative wire terminals with a stiff brush.

A special battery charger (constant low voltage / ampere) is required for recharging low-maintenance batteries. Using a conventional battery charger may shorten the battery life.

If the vehicle will not be used for a month or longer, take out the battery and store it in a cool, dry place.

Completely recharge the battery before re-installation. When charging the battery, it should be taken out from the vehicle.

Battery Charging

Remove battery.

Connect the charger with the positive and negative end of battery.

Switch on the charger.

NOTE: It is recommended to charge the battery with current 10% of the battery amp-hour capacity.

Disconnect the charger after finishing charging.

Separate the charger and battery.

NOTE: If the vehicle will not be used for a long time, the battery should be recharged every month.

MAINTENANCE

Battery Assembly

Ensure the vehicle is on level ground and parked.

Make sure the key is on "OFF" position.

Mount the battery in place.

Mount the battery belt.

Mount the red positive wire (+).

Mount the black negative wire (-).

Mount the left cover.

WARNING

Avoid contact with skin, eyes or clothing, and always shield eyes when working near batteries.

Keep out of reach of children. Keep batteries away from sparks, flames, cigarettes or other sources of ignition. Ventilate the area when charging or using in a closed space.

Battery acid antidote:

EXTERNAL: Flush with water.

INTERNAL: Get prompt medical attention.

EYES: Flush with water for 15 minutes and get prompt medical attention.

NOTE: The wrong installation or removal sequence for positive and negative wires may lead to a short circuit between the battery and the vehicle.

MAINTENANCE

Light

High beam and low beam light is adjustable. Rotate the light adjusting knob **1** to adjust light.



⚠ CAUTION

Adjustment of high / low beams should be performed in accordance with local regulations. The standard is based on front and rear wheels on level ground with the driver seated on the vehicle.

All the lights are LED structure, which cannot be repaired if damaged or failed. Have your dealer replace the entire assembly if an LED is damaged or has failed.

⚠ CAUTION

Do not leave the power turned on for a long time if engine will not be started. Headlight constantly on will use battery capacity and cause the engine to fail to start.

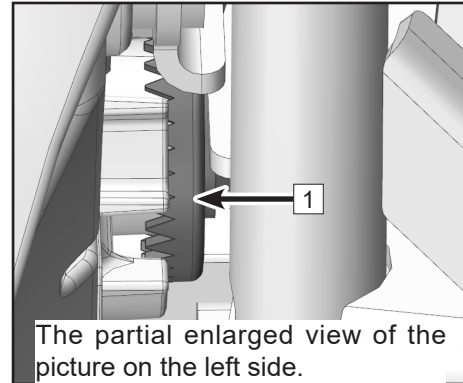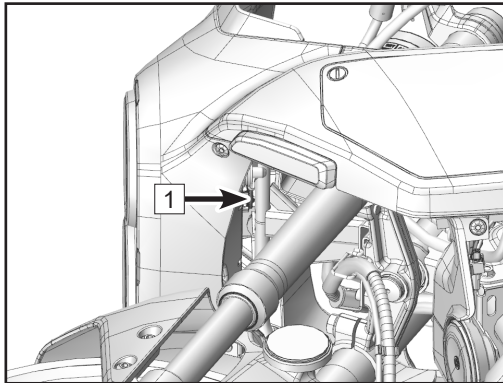


MAINTENANCE

Fuse

Fuse box **1** is located under the seat, it is visible after removing the seat and the dust cover. If a fuse is blown, inspect the electrical system for damage and replace with the same new fuse.

⚠ WARNING

Do not use any substitute for the standard fuse. Replace a blown fuse with a new one of the same ampere. Ampere value is shown on fuse.

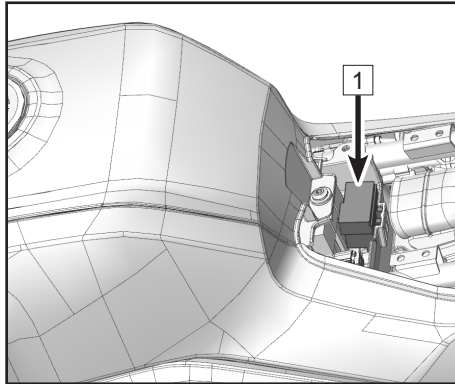

MAINTENANCE

Catalytic Converter

This motorcycle is equipped with a catalytic converter in the exhaust system. Platinum and rhodium contained inside the converter reacts with the engine exhaust of carbon monoxide and hydrocarbons to convert them into carbon dioxide and water, resulting in cleaner exhaust gases discharged into the atmosphere.

For proper operation of the catalytic converter, the following cautions must be followed:

Only use unleaded gasoline. Never use leaded gasoline. Leaded gasoline significantly reduces the service life of the catalytic converter.

Do not coast the vehicle with the engine and transmission engaged, and the ignition switch and/or engine stop switch off. Do not attempt to start the engine many times when the battery is discharged. Under these conditions, unburned air/fuel mixture can flow into exhaust system and accelerating the reaction with the converter, which leads the converter to become overheated and damaged when the engine is hot, or reduce converter performance when the engine is cold.

CAUTION

Only use unleaded gasoline. Even a little lead can damage the precious metals inside the catalytic converter, causing failure. Do not add anti-rust oil or engine oil into the muffler, which may result in catalytic converter failure.

MAINTENANCE

Fuel Evaporation System

When required by environmental emissions regulations, this vehicle is manufactured with an EVAP System. Fuel vapors from the fuel tank are drawn into a carbon tank through an absorption tube. The fuel vapors are absorbed by canister that contains active carbon when the engine is stopped. When the engine is running, fuel vapors absorbed in the carbon canister flow into the air intake and burn as a normal part of combustion, avoiding environmental pollution instead of being released into the air directly. Meanwhile, air pressure inside the fuel tank is balanced by the EVAP system. When the inner air pressure of fuel tank is lower than outside, it will replenish through the air tube of the carbon canister and absorption tube. The EVAP tube system should always remain clear without blocking or collapsed tubing, otherwise the fuel pump could be damaged, and the fuel tank can also become deformed or broken.

Please contact CFMOTO dealer if a fuel evaporation system component has failed. Do not modify the fuel evaporation system, or the system will not meet requirements for environmental regulations. Tube connections should be well connected after any repair without air leakage, blocking, collapsed, being broken or damaged etc.

CLEANING & STORAGE

General Precautions

Keeping your motorcycle clean and in best performance will extend the vehicle service life. Covering your motorcycle with a high quality, breathable motorcycle cover will help to protect the vehicle during storage.

- Always clean the motorcycle after the engine and exhaust system have cooled.
- Avoid applying harsh detergents to seals, brake pads, and tires.
- Wash the vehicle by hand. Do not use high-pressure spray.
- Avoid all harsh chemicals, solvents, detergents, and household cleaning products like ammonium hydroxide.
- Gasoline, brake fluid, and coolant will damage painted plastic surfaces. Wash them off immediately if splashed on any painted plastics.
- Avoid metal brushes, steel wool, and all other abrasive pads or brushes to clean the vehicle.
- Use caution when washing the windshield, headlight cover, and other plastic parts as they can be easily scratched.
- Avoid high water pressure, as it may penetrate seals and electrical components, resulting in vehicle damage.
- Avoid spraying water into areas such as air intakes, fuel system, electrical components, muffler outlets and fuel tank lock.

CLEANING & STORAGE

Washing the Vehicle

- Rinse with cold water to remove any loose dirt.
- Mix a mild detergent specific for motorcycles or automobiles with water in bucket. Use a soft cloth or sponge to wash your motorcycle. If necessary, use a mild degreaser to remove any oil or grease build-up. Start at the top of the motorcycle and wash bottom parts last.
- After washing, rinse your motorcycle with clean water to remove any residue (residue from the detergent can damage the components of your motorcycle).
- Dry off your motorcycle with a soft cloth to avoid scratches.
- Start the engine and allow it idle for several minutes. The heat from the engine will help dry off the vehicle in moist areas.
- Carefully ride the motorcycle at a low speed and apply the brake several times. This will help to dry the brakes and restores their normal operating performance.
- Lubricate the drive chain to prevent rusting.

NOTE:

When riding in areas where the roads are salted or near the ocean, clean the motorcycle after your ride with cold water immediately. Do not use warm water to wash your vehicle as it accelerates the chemical reaction of the salt. After drying the vehicle, applying an anti-corrosion spray to all metal or chrome surfaces will help prevent corrosion. In the case of riding during a rainy day or just washing the motorcycle, condensation may form on the inside of the headlight lens. If this happens, start the engine and turn on the headlight to remove the moisture.

CLEANING & STORAGE

Protecting the Surface

After washing your motorcycle, coat the painted surfaces, both metal and plastic, with a commercially available motorcycle/automobile wax. Wax should be applied every three months or as conditions require. Always use non-abrasive products and apply them according to the instructions.

Windshield and Other Plastic

After washing, use a soft cloth to gently dry off plastic parts. When the vehicle is dry, treat the windshield, headlight lens, and other unpainted plastic parts with an approved plastic cleaner or polish.

CAUTION

Plastic parts may deteriorate and break if they come in contact with chemical substances or household cleaning products such as gasoline, brake fluid, window cleaners, thread fastener glue, or other harsh chemicals. If a plastic part comes in contact with any harsh chemical substance, wash it off with water, and then inspect for damage. Avoid using abrasive pads or brushes to clean plastic parts, as they will damage the plastic surface.

CLEANING & STORAGE

Chrome and Aluminum

Chromium alloy and uncoated aluminum parts exposed to the air can oxidize, become dull and lackluster. These parts should be cleaned with a detergent and polished with a spray polish. Painted and unpainted aluminum wheels should be cleaned with special detergent.

Leather, Vinyl, and Rubber Products

If your motorcycle has leather accessories, use a special leather cleaner/treatment to clean. Washing leather parts with detergent and water will damage them, shortening their life. Vinyl parts should be cleaned separately. Tires and other rubber components can be treated with a rubber protective agent to preserve their life.

DANGER

Special care must be taken when treating tires, that the protective agent applied will not affect the tire tread function. If applied incorrectly, it may decrease the traction between the tire and ground, possibly causing a loss of control.

CLEANING & STORAGE

Preparation for Storage

Clean the entire vehicle thoroughly.

Run the engine for about 5 minutes, stop the engine, then change the engine oil and filter.

⚠ DANGER

Oil is a toxic substance. Dispose of used oil properly. Keep the used oil out of reach of children. If skin contacts oil it should be washed off immediately.

Fill with fresh engine oil.

Fill with fuel and appropriate fuel additive.

⚠ DANGER

Gasoline is extremely flammable and explosive under certain conditions. Ensure the ignition key is turned to “~~X~~” position before filling the tank. Do not smoke. Make sure the area is well ventilated and free of any source of flame or sparks. This includes any appliance with a pilot light. Gasoline is a toxic substance. Dispose of unused gasoline properly. Keep the used oil out of reach of children. If skin contacts gasoline it should be washed off immediately.

Reduce tire pressure by 20% during storage period.

Raise wheels off the ground using wood boards or other material to keep dampness away from the vehicle.

Spray a corrosion inhibitor on all unpainted metal surfaces to prevent rusting. Avoid spraying on rubber parts or on the brakes.

Lubricate the drive chain and all cables.

CLEANING & STORAGE

Remove the battery. Store it out of the sun and in a cool, dry place. Ensure that the battery is fully charged according to periodic maintenance chart.

Tie plastic bags over the muffler exhaust pipe to prevent moisture from entering.

Put a cover over the motorcycle to keep dust and dirt from collecting on it.

Preparation After Storage

Remove the plastic bags from the Muffler.

Verify the battery condition. Charge it if necessary, then install the battery in the motorcycle.

Lubricate any pivot points as necessary (handle bar levers, foot pedal, etc).

Check all the points listed in Pre-Ride Inspection section.

Test ride at slow speed to verify the vehicle functions normally.

Transporting Your Vehicle

If your vehicle needs to be transported, it should be carried on a motorcycle trailer, a flatbed truck, or trailer that has a loading ramp or lifting platform, and be secured with motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

GENERAL TROUBLES AND CAUSES

Problem	Components	Possible cause	Solution
Engine fails to start	Fuel system	No fuel in fuel tank	Refuel
		Pump blockage or damage, poor fuel quality	Clean or replace
	Ignition system	Spark plug: Excessive carbon deposits, too long time usage	Clean or replace
		Spark plug cap: Poor contact or failed	Inspect or replace
		Ignition coil: Poor contact or failed	Inspect or replace
		ECU: Poor contact or failed	Inspect or replace
		Trigger coil: Poor contact or failed	Inspect or replace
		Stator: Poor contact or failed	Inspect or replace
		Wiring: Poor contact or failed	Inspect or adjust
	Cylinder compression	Starting mechanism: worn or damaged	Inspect or replace
		Intake and exhaust valves, valve seats: Excessive carbon or too long time use	Inspect or replace
		Cylinder, piston, piston ring failure: Excessive carbon or wear	Inspect or replace
		Intake manifold leakage: Too long time use	Inspect or replace
Valve timing faulty		Inspect or replace	

GENERAL TROUBLES AND CAUSES

Insufficient power	Valve and piston	Intake and exhaust valves, piston: Excessive carbon deposits, poor fuel quality or poor oil quality	Clean or replace
	Clutch	Clutch slips: poor oil, too long time use or overloaded, cable stretched	Adjust or replace
	Cylinder and ring	Cylinder, piston rings: Wear, poor oil quality or too long time use.	Replace
	Brake	Incomplete separation of brake: the brake is too tight	Adjust
	Main chain	The drive chain is too tight: improper adjustment	Adjust
	Engine	Engine overheats: too rich or too lean mixture, poor oil, fuel quality, clogged air filter, etc	Adjust or replace
	Spark plug	Improper spark plug gap, normal specification is 0.7mm -0.9mm	Replace
	Intake pipe	Air leakage of intake pipe: too long time use	Replace
	Cylinder head	Air leakage for cylinder head or valves	Adjust or replace
	Electric system	Electrical system failure	Inspect or repair
Air filter	Clogged air filter	Clean or replace	

GENERAL TROUBLES AND CAUSES

Headlights and tail lights do not work	Cable	Poor connections	Adjust
	Left and right switches	Switch: Poor contact or damage	Adjust or replace
	Headlight	Bulb and lamp holder failure or damage	Adjust or replace
	Regulator	Inspection. Loose connection or failed	Inspect or replace
	Magneto	Inspect the stator: poor connection or failed	Inspect or replace
Horn does not work	Battery	No electricity	Recharge or replace
	Left switch	Horn button fault or damage	Adjust or replace
	Cable	Poor connection	Adjust or repair
	Horn	Horn damage	Replace

The items listed are the common faults of a motorcycle. If your motorcycle has a failure (especially the electronic fuel injection system, fuel evaporation system, or alarms system), please contact a CFMOTO authorized dealer to check and repair the vehicle.

DANGER

Do not try to fix faults without professional help, otherwise it could cause an accident. You become responsible for accidents related to any repairs or maintenance not performed by a CFMOTO dealer.

Telematics Box (T-BOX) and CFMOTO Ride App

In select markets, this CFMOTO vehicle is equipped with an intelligent terminal box, or T-Box. This feature helps build a communication bridge between the owner and vehicle through the CFMOTO RIDE APP, which installs on an Android or Apple phone. Contact your dealer for more information on CFMOTO RIDE availability in your market and its features.



Scan the QR code to download
CFMOTO RIDE APP

ZHEJIANG CFMOTO POWER CO.,LTD

No.116,Wuzhou Road,Yuhang Economic Development Zone,
Hangzhou 311100,Zhejiang Province,China

☎ 86-571-86258863

☎ +86-571-89265788

✉ service@cfmoto.com.cn

🌐 <http://global.cfmoto.com>

6FIV-380101-7200-12 EU232